* Some of the contents in this manual may differ from your phone, depending on the software installed or your service provider.

ELECTRONICS

Printed in Korea
Code No.: GH68-05653A
English. 03/2005. Rev. 1.0

World Wide Web
http://www.samsungmobile.com

SAMSUNG

GPRS TELEPHONE
SGH-D488

Contents

Important safety precautions 7

Unpacking 9

Your phone 10

Phone layout 10
Displays 14
External display 17
Service light 18
Camera 18
Built-in antenna 19

Getting started 20

Inserting/Removing the SIM card 20
Installing/Removing/Charging the battery 21
Switching the phone on or off 25
Selecting functions and options 26

Call functions 28

Making a call 28
Ending a call 31
Answering a call 31
Rejecting a call 31
Adjusting the volume 32
Accessing options during a call 33
Using the headset 41

Entering text 42

Changing the text input mode 43
Using the touch pad 44
Using Chinese Pinyin mode 45
Using Chinese stroke modes 47
Using Quick English mode 49
Using English mode 52
Using number mode 54
Using symbolic mode 54

Using the menus 55

Accessing a menu function 55
List of menu functions 56

Phonebook menu 62

Find name *(Phonebook 1.1)*..... *62*
Add entry *(Phonebook 1.2)*..... *65*
Group search *(Phonebook 1.3)* *66*
Speed-dial list *(Phonebook 1.4)* *67*
Copy all to phone *(Phonebook 1.5)* *69*
Send all via infrared *(Phonebook 1.6)* *69*
Delete all *(Phonebook 1.7)* *71*
Own number *(Phonebook 2.1)* *72*
Group setting *(Phonebook 2.2)* *73*
Memory status *(Phonebook 2.3)* *74*
Service directory *(Phonebook 3.1)* *74*

SIM-AT (SIM Application Toolkit) 75

Call records..... 76

Missed calls *(Menu 2.1)* *76*
Received calls *(Menu 2.2)* *76*
Dialled calls *(Menu 2.3)* *77*
Delete all *(Menu 2.4)*..... *77*
Call time *(Menu 2.5)*..... *77*
Call costs *(Menu 2.6)*..... *78*

Network services 80

Call diverting *(Menu 3.1)* *80*
Call barring *(Menu 3.2)*..... *82*
Call waiting *(Menu 3.3)*..... *84*
Network selection *(Menu 3.4)*..... *85*
Caller ID *(Menu 3.5)*..... *86*
Active line *(Menu 3.6)* *86*

Sound settings..... 87

Incoming calls *(Menu 4.1)*..... *87*
Messages *(Menu 4.2)*..... *88*
Power on/off *(Menu 4.3)*..... *89*
Connection tone *(Menu 4.4)*..... *89*
Key tone *(Menu 4.5)*..... *89*
Minute minder *(Menu 4.6)* *90*
Quiet mode *(Menu 4.7)*..... *90*

Folder tone *(Menu 4.8)* *91*
On-time alarm *(Menu 4.9)* *91*
Alerts on call *(Menu 4.10)* *92*

Messages 93

Short messages *(Menu 5.1)* *93*
Multimedia messages *(Menu 5.2)* *100*
Push messages *(Menu 5.3)* *112*
Preset messages *(Menu 5.4)* *112*
Voice mail *(Menu 5.5)* *113*
Broadcast *(Menu 5.6)* *114*
Settings *(Menu 5.7)* *115*
Memory status *(Menu 5.8)* *119*

Fun box 120

WWW services *(Menu 6.1)* *120*
Fun club *(Menu 6.2)* *126*
Media box *(Menu 6.3)* *127*
JAVA world *(Menu 6.4)* *131*

Organiser 136

New memo *(Menu 7.1)* *136*
Calendar *(Menu 7.2)* *138*
To do list *(Menu 7.3)* *141*
Clock *(Menu 7.4)* *142*
Alarm *(Menu 7.5)* *144*
Calculator *(Menu 7.6)* *146*
Conversion *(Menu 7.7)* *147*
Timer *(Menu 7.8)* *148*
Stopwatch *(Menu 7.9)* *149*
Dictionary *(Menu 7.10)* *150*

Camera 152

Take photos *(Menu 8.1)* *152*
My photos *(Menu 8.2)* *158*
My albums *(Menu 8.3)* *158*
Delete all *(Menu 8.4)* *159*
Group delete *(Menu 8.5)* *159*
Settings *(Menu 8.6)* *160*
Memory status *(Menu 8.7)* *161*

Phone settings 162

Display *(Menu 9.1)* *162*
Greeting message *(Menu 9.2)* *164*
Language *(Menu 9.3)* *164*
Security *(Menu 9.4)* *165*
Auto redial *(Menu 9.5)* *168*
Voiceclarity *(Menu 9.6)* *168*
Active folder *(Menu 9.7)* *168*
Anykey answer *(Menu 9.8)* *169*
Side key *(Menu 9.9)* *169*
Infrared activation *(Menu 9.10)* *170*
Reset settings *(Menu 9.11)* *170*

Using ALS (Alternate Line Service) 171

Solving problems 173

Access codes 176

Phone password 176
PIN 176
PIN2 177
PUK 177
PUK2 178
Call barring password 178

Health and safety information 179

SAR certification information 179
Precautions when using batteries 180
Road safety 182
Operating environment 182
Electronic devices 183
Potentially explosive atmospheres 184
Emergency calls 185
Other important safety information 186
Care and maintenance 187

Glossary 189

Quick Reference Card 193

Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road safety at all times

Do not use a hand-held phone while driving; park the vehicle first.

Switching off when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching off in aircraft

Wireless phones can cause interference. Using them in aircraft is both illegal and dangerous.

Switching off near all medical equipment

Switch off your phone near the medical equipment. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on, especially when the phone is in service.

Emergency call

Key in the emergency number for your present location, then press the key. Give all the necessary information as accurately as possible. Do not cut off the call until given permission to do so.

Keeping small children away from your phone

Keep the phone and all its parts including accessories out of the reach of small children.

Accessories and batteries

Use only Samsung-approved accessories. Use of any unauthorised accessories could damage your phone and may be dangerous.

Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers.

Qualified service

Only qualified service personnel may install or repair your phone.

For more detailed safety information, see “Health and safety information” on page 179.

CAUTION

RISK OF EXPLOSION IF A BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Unpacking

Your package contains the following items:

Phone

Travel adapter

Battery

Finger strap

Stylus pen

User manual

Note: The items supplied with your phone may be different depending on the country.

Your phone

Phone layout

The following illustrations show the main elements of your phone:

Open view

Closed view

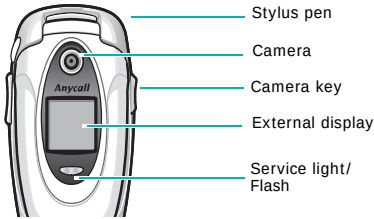

Touch pad view

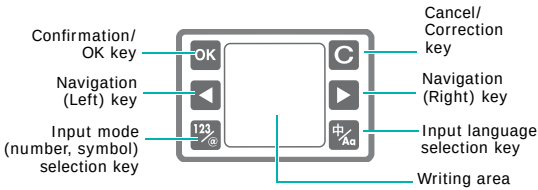

Touch pad Key(s)	Description (available when you input characters)
OK	Confirms your input.
C	Deletes characters from the display.
◀ ▶	Moves through the words that you have entered.
123/@	toggles the input mode between number mode and symbol mode.
中/Aa	toggles the input mode between English, simplified Chinese, and traditional Chinese.

Key(s)	Description
(soft keys)	Perform the functions indicated by the text above them, on the bottom line of the display.
	In menu mode, scroll through the menu options and the Phonebook memory. In idle mode, the Left key accesses the new SMS message writing screen (**Menu 5.1.1**), the Right key accesses the incoming call melody setting menu (**Menu 4.1.1**), the Up key accesses the camera menu (**Menu 8**), and the Down key accesses the calendar menu (**Menu 7.2**).
	In idle mode, launches the WAP (Wireless Application Protocol) browser directly.
	Initiates or answers a call. In idle mode, accesses the call log list. In menu mode, selects a menu function or stores information that you have entered, such as a name in the phone or SIM memory.
	Deletes characters from the display. When pressed and held in idle mode, quickly accesses the new memo screen (**Menu 7.1**). In menu mode, returns to previous screen.

Key(s)	Description
	Ends a call. When pressed and held, switches the phone on or off. In menu mode, cancels your input and returns to idle mode.
	When pressed and held in idle mode, quickly accesses your voice mail server.
	Enter numbers, letters and some special characters.
 	Used for various purposes in different functions. When pressed and held while entering a phone number, the * key enters a pause. When pressed and held in idle mode, the # key enters or exits the quiet mode.
	(on the left side of the phone) During a call, adjust the earpiece volume. In idle mode with the phone open, adjust the key tone volume. When pressed and held as a call is coming in, rejects the call or silences the ring tone. See page 169. In the capture mode, flip the picture vertically by pressing the volume up key and horizontally by pressing the volume down key.

Key(s)	Description
	(on the right side of the phone) When pressed and held, turns the camera capture mode on. In capture mode, works as a camera shutter.

Displays

Main display

The display has three areas:

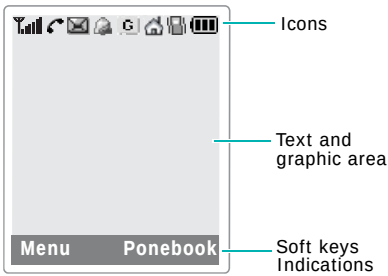

Area	Description
First line	Displays various icons. See page 15.
Middle	Display messages, instructions and any information that you enter, such as a number to be dialled.
Last line	Shows the functions currently assigned to the two soft keys.

Icons

Icon	Description
	Shows the received signal strength. The more bars, the stronger the signal.
	Appears when a call is in progress. When your SIM card supports ALS (Alternate Line Service), this icon may appear with the number 1, 2, or both. For example , , .
	Appears when you are out of a service area. When it displays, you cannot make or receive calls.
	Appears when you have new or unchecked voice messages. When your SIM card supports ALS (Alternate Line Service), this icon may appear as , , or . (This icon may be shown only if your service provider supports this.)
	Appears when you have new or unread messages.
	Appears when you have new or unchecked multimedia messages.
	Appears when you are retrieving a multimedia message.
	Appears when you are sending a multimedia message.
	Appears when the IrDA port is active. For details, see page 170.
	Appears when you connect the phone to the computer by the IrDA port.
	Appears when you set an alarm to ring at a specified time.

Icon	**Description** (continued)
	Appears when the Call diverting feature is activated. When your SIM card supports ALS (Alternate Line Service), this icon may appears with the number 1, 2, or both. For example: , , or . (This icon may be shown only if your service provider supports this.)
	Appears when you are connected to the GPRS network.
	Appears when you are in your home zone. (May be shown only if your service provider supports this feature)
	Appears when you are in your office zone. (May be shown only if your service provider supports this feature)
	Appears when you set the alert type for incoming calls to **Vibration**. For further details, see page 88.
	Appears when you set the alert type for incoming calls to **Vibration then melody**. For further details, see page 88.
	Appears when quiet mode is active.
	Shows the level of your battery. The more bars you see, the more power you have left.

Backlight on mode

The displays and the keypad are illuminated by a backlight. When you press any key or open the folder, the backlight illuminates. It turns off if no key is pressed within a given period of time, depending on the **Backlight** option setting. See page 163 for further details.

Dim mode

If no key is pressed for a given period of time which you can set in the **Backlight** menu option (**Menu 9.1.4**), the backlight dims to save power. Press any key to awake it from dim mode.

Main display off mode

If no key is pressed for one minute after the backlight dims, the main display shuts off. Press any key to reactivate the main display.

External display

Your phone has an external display on the folder.

It indicates that you have an incoming call or message, and notifies you at the specified time if you have set an alarm.

When you press and hold either of the volume keys with the folder closed, the external display will illuminate.

When the headset is connected, you can also use its button to turn on the external display.

Service light

The service light is on the folder. It flashes when services are available on the phone.

To activate or deactivate the service light, set the **Service light** menu (**Menu 9.1.6**). See page 163.

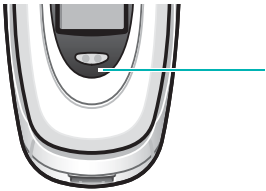

Camera

The camera embedded in your phone allows you to take a picture of people or events while on the move.

For further details about using the Camera feature, see page 152.

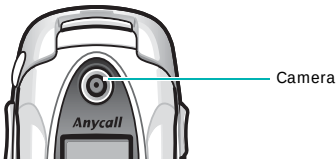

Built-in antenna

Your phone has a built-in antenna. As with other mobile radio transmitting equipment, do not touch Getting started the antenna unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Inserting/Removing the SIM card

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available, and so on.

- Keep all SIM cards out of the reach of small children.
- The SIM card and its data can be easily damaged by scratches or bending, so be careful when you are handling, inserting, or removing the card.
- When you are installing the SIM card, always make sure that the phone is switched off, as you will need to remove the battery.

Inserting the SIM card

1. If necessary, remove the battery by referring to page 21.
2. Insert and slide the SIM card under the tab, ensuring that the notched corner goes to the top left and the gold contacts of the card face goes into the phone.

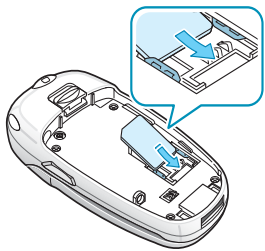

Removing the SIM card

To remove the SIM card, slide the card out of the holder, as shown.

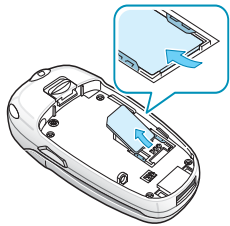

Installing/Removing/Charging the battery

Your phone is powered by a rechargeable Li-ion battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

Note: You must fully charge the battery before using your phone for the first time. A discharged standard battery is fully recharged in approximately 130 minutes.

Installing the battery

1. Insert the teeth on the bottom of the battery into the corresponding slots on the phone..

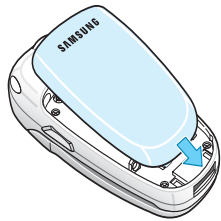

2. Press the battery against the back of the phone until it clicks into place.

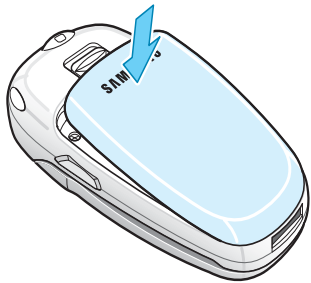

Removing the battery

1. Switch off the phone by pressing and holding the key.

2. To remove the battery, pull the battery catch toward the top of the phone and hold it in that position. Lift the battery away from the phone.

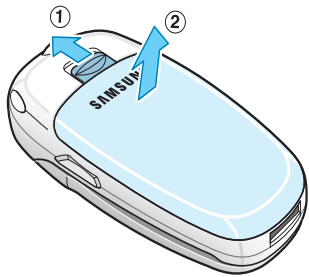

Charging the battery by using the travel adapter

Note: The phone can be used while the battery is being charged, but this causes the battery to charge more slowly.

1. Plug the travel adapter connecter into the jack at the bottom of the phone.

   Check that the arrow on the connector is facing up, as is the phone.

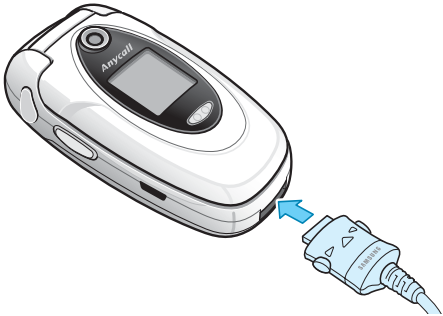

2. Plug the adapter into a standard AC wall outlet.

   While charging, the battery icon at the top right-hand corner of the display repeatedly fills to show that the battery is charging.

3. When charging is finished and the ‘Fully charged’ message is displayed, disconnect the adapter from the power outlet and from the phone by pressing the grey tabs on both sides of the connector and pulling the connector out.

Switching the phone on or off

To switch the phone on:

1. Hold down the key until the phone switches on.

2. If the phone asks for a PIN, enter the PIN and press the **OK** soft key. For further details, see page 176.

   The phone searches for your network and the current date and time appear on the main and external display. After finding it, you can make and receive calls.

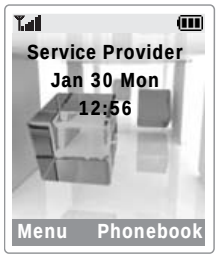

External display

Note: To change the language, use the **Language** menu option (**Menu 9.3**). For further details, see page 164.

To switch the phone off:

Hold down the key until the power-off animation displays.

Selecting functions and options

Your phone offers a set of functions that allows you to customise your phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the labels or icons on the bottom line of the display, just above the soft keys, indicate their current roles.

Example:

Press the left soft key to access the menu functions.

Press the right soft key to access the Phonebook feature.

To view various functions/options available or select the one you want:

1. Press the appropriate soft key.

2.

To	Press the
select the: • function displayed • option highlighted	**Select** soft key.
view the next function or highlight the next option on a list	Down key.
move back to the previous function or option on a list	Up key.
move back up one level in the structure	(or **Back**) soft key or **C** key.
return to idle mode	key.

In some functions, you may be asked for a password or PIN. Enter the required code and press the **OK** soft key.

Call functions

Making a call

Using the number keypad

When the idle screen is displayed, enter the area code and phone number, and press the key.

Note: If you have set the **Auto redial** option (**Menu 9.5**) to **On**, the number will be redialled automatically up to ten times if the person you called does not answer or the line is busy. For further details, see page 168.

Correcting the number

To clear	Press the
the last digit displayed	**C** key.
any other digit	Navigation keys until the cursor (|) is immediately to the right of the digit to be cleared and press the **C** key. You can also insert a missing digit simply by pressing the appropriate key.
all digits displayed	**C** key and hold it down for more than one second.

Making an international call

1. Press and hold the **0** key for the international prefix. The + character appears.
   Or press **0** key twice.

2. Enter the country code, area code and phone number and press the key.

Making a call from Phonebook

You can store the names and phone numbers you call regularly in the SIM card and the phone's memory, which are jointly called Phonebook. You then do not need to remember all your numbers; simply select the required name to recall the associated number.

For further details about the Phonebook feature, see page 62.

Using the call logs

The phone stores up to 20 calls dialled, received, or missed chronologically. The last call is saved in the first position. If the same number occurs more than once, only the latest occurrence is saved.

To recall any of these numbers:

1. Press the key in idle mode to access the Call log list.

2. Use the Up and Down keys to scroll through the list until the number you want highlights.

   The call logs are listed with the following icons:

   - : Dialled calls (Menu 2.3)
   - : Received calls (Menu 2.2)
   - : Missed calls (Menu 2.1)

3. To dial the number, press the key.

To view each call record separately, see ‘Call records’ on page 76.

Viewing missed calls

If you have a subscription that includes Caller Line Identification (CLI) and you are unable to answer a call, you can find out who was calling you so that you can call the person back.

The number of missed calls displays on the idle screen immediately after a call has been missed.

To view missed calls immediately:

1. If the folder is closed, open it up.
2. Press the **View** soft key.

   The list of missed calls displays.
3. If necessary, scroll to the number you want by pressing the Up or Down key.
4. To dial the number, press the key.

To use the missed call options, see ‘Missed calls’ on page 76.

Note: To clear the missed call notification on the display, press the key.

Speed-dialling from Phonebook

Once you have stored numbers in the Phonebook, you can dial a number simply by pressing one or two keys. For further details, see page 67.

Ending a call

When you want to finish your call, briefly press the key or close the folder.

Answering a call

When somebody calls you, the phone rings and displays the incoming call animation.

If the caller can be identified, the caller's phone number, or name if stored in your Phonebook, displays.

To answer a call, open the folder. If it is already open, press the key or **Accept** soft key.

Note: You can answer a call while using the Phonebook or menu features. The current operation stops.

Rejecting a call

To reject an incoming call, press the key.

If the **Side key** option is set to **Reject**, you can press and hold either of the volume keys on the left side of the phone to reject an incoming call; see page 169.

Adjusting the volume

During a call, if you wish to adjust the earpiece volume, use the volume keys on the left side of the phone.

When you hear a sound, such as ringtone, you can also adjust the earpiece volume. But it is not fixed.

Press the ▲ key to increase the volume level and the ▼ key to decrease it.

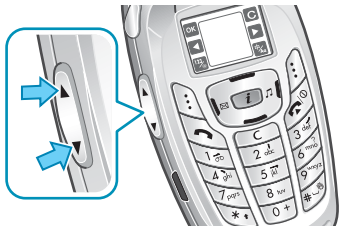

In idle mode with the folder open, you can adjust the key tone volume using ▲ and ▼ keys.

Note: When a call comes in, you can reject the call or mute the call ringer by pressing and holding one of the volume keys, depending on the **Side key** option settings (**Menu 9.9**). For further details, see page 169.

Accessing options during a call

Your phone provides a number of control functions that you can use during a call.

Using the loudspeaker

You can speak and listen to the phone from a short distance without holding the phone to your ear.

Turn on / off the loudspeaker

1. Press the **Options** soft key.
2. Press the Up or Down key to highlight the **Speaker on** / **Normal** option. Press the **Select** soft key.

CAUTIONS: Do not hold the phone near to your ear when you use the loudspeaker, as the volume may be extremely loud.

Using Voiceclarity

Voiceclarity feature makes received sound louder and clearer during a call. It is useful when you are in a noisy place.

The phone turns on Voiceclarity feature automatically after a while when you are in a noisy place and Voiceclarity is set to on.

Turn on / off Voiceclarity

1. Press the **Options** soft key.
2. Press the Up or Down key to highlight the **Voiceclarity on / Voiceclarity off** option. Press the **Select** soft key.

Note: You cannot activate Voiceclarity when you use the loudspeaker or the handsfree car kit.

Putting a call on hold

You can place a call on hold whenever you want. You can make another call while you have a call in progress if this service is supported by your network. Of these two calls, one is active and the other is on hold, and you can switch between the two.

To place a call on hold, simply press the **Option** soft key and select **Hold**. You can reactivate the call whenever you want by pressing the **Retrie.** soft key.

Switching the microphone off (Mute)

You can temporarily switch your phone's microphone off so that the person with whom you are speaking cannot hear you.

Example: You may wish to say something to another person in the room, but do not want the person on the phone to hear you.

1. Press the **Options** soft key.
2. When **Mute** highlights, press the **Select** soft key.

   The Mute icon ( ) appears on the bottom line of the display and your correspondent can no longer hear you.

To switch the microphone back on:

1. Press the **Options** soft key.

2. When **Unmute** highlights, press the **Select** soft key.

   The Mute icon disappears and your correspondent can once again hear you.

Muting/Sending key tones

You can turn the key tones off or on during a call. When the **Mute keys** option is selected, your phone does not transmit key tones. This allows you to press keys without hearing annoying key tones during a call.

To communicate with answering machines or computerised telephone systems, the **Send keys** option must be selected.

Searching for a number in Phonebook

You can search for a number in Phonebook during a call.

1. Press the **Options** soft key.

2. If necessary, press the Up or Down key to highlight the **Phonebook** option. Press the **Select** soft key.

3. Select the **Find name** option and press the **Select** soft key.

   The Phonebook entries are listed.

4. Enter the first few letters of the name that you want to find.

   The Phonebook entries will be listed starting with the first entry matching your input.

Note: You can also scroll through the Phonebook from the beginning, by pressing the Up or Down key.

5. To view the highlighted entry, press the **OK** soft key.

For further details about the Phonebook feature, see page 62.

Sending DTMF tones

You can send the DTMF (Dual Tone Multi-Frequency) tones of the number on the display during a call.

This option is helpful for entering a password or account number when you call an automated system, like a banking service.

To send the DTMF tones:

1. When you are connected to the teleservice system, press the **Options** soft key.
2. Press the Up or Down key to highlight the **Send DTMF** option. Press the **Select** soft key.
3. Enter the number you want to send and press the **OK** soft key.

   The tones of the displayed number are sent.

Using the message service

You can read or write a message during a call.

1. Press the **Options** soft key.
2. Press the Up or Down key to highlight the **Message** option. Press the **Select** soft key.

3. To read a received message, select the **Inbox** option, and then scroll to the message that you want to read.

   To write a message, select the **Create** option.

4. Press the **Select** soft key.

For further details about the SMS feature, see page 93.

Using the SIM-AT (SIM Application Toolkit)

If you use a SAT card that provides additional services, the SAT menu displays. For further details, see your SIM card instructions.

Making a second call

You can make a other call while you have a call in progress, if this service is supported by your network.

To make a call while you have a call in progress:

1. Enter the phone number that you want to dial or look it up in the Phonebook.

2. Press the key to dial the second call. The first call is automatically put on hold.

Or alternatively:

1. Put the current call on hold by pressing the **Hold** soft key.

2. Make the second call in the normal way.

To switch between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with the other person.

To end the call on hold, press the **Options** soft key and select the **End held call** option.

When you want to finish, end each call normally by pressing the key. If you want to finish all calls at once, close the folder.

Answering a second call

You can answer an incoming call while you have a call in progress, if this service is supported by your network and you have activated the **Call waiting** option (see page 84). You will be notified of an incoming call by a call waiting tone.

To answer a call while you have another call in progress:

1. Press the key to answer the incoming call. The first call is automatically put on hold.

2. To switch between the two calls, press the **Swap** soft key.

3. To end the call on hold, press the **Options** soft key and select the **End held call** option.

   To end the current call, press the key. The call on hold is continued.

Transferring a call

You can transfer the current call to the call on hold if this service is supported by the network, so that the callers can talk to each other. You are disconnected from both of them.

During a call, answer or make a call in the normal way, and press the **Options** soft key.

1. Press the Up or Down key to select the **Transfer** option and press the **Select** soft key.

   The two people are connected to each other.

Making a multi-party call

Multi-party calling is a feature of some network service that allows up to six people to take part simultaneously in a multi-party or conference call. For more information, contact your service provider.

Setting up a multi-party call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key and select the **Join** option. Press the **Select** soft key.
4. To add a new person to the multi-party call, call the person in the normal way. Then press the **Options** soft key and select the **Join** option. Press the **Select** soft key.

You can add incoming callers by answering the call and selecting the **Join** option. Repeat as needed.

Getting a second call during a multi-party call

To make a call when you are on a the multi-party call

See ‘Making a second call’ on page 37.

To answer a call when you have the multi-party call:

1. Press the key to answer the incoming call. The first call is automatically put on hold. The other call participants can continue talking.

2. To switch between the two calls, press the **Swap** soft key.

3. To end the call on hold, press the **Options** soft key and select the **End held multiparty** option or **End held call** option.

   To end the current call, press the key. The call on hold is reconnected to you.

Having a private conversation with one participant

1. Press the **Options** soft key and select the **Split** option. Press the **Select** soft key.

2. Press the Up or Down key to highlight a participant and press the **Select** soft key.

   Now you can talk privately with that person. The other participants can continue to converse with each other.

3. To return to the multi-party call, press the **Options** soft key and select the **Join** option.

4. Press the **Select** soft key.

   All of the multi-party call participants can now hear each other.

Removing one participant

1. Press the **Options** soft key and select the **Remove** option.
2. Press the Up or Down key to highlight a participant and press the **Select** soft key.

   The call with that participant ends, but you can continue to talk with the other participants.
3. End the multi-party call by pressing the key.

Using the headset

With the headset, you can make or answer a call without holding the phone.

When you connect the headset to the jack at the left side of the phone, the button on the headset works as listed below:

To	Press
redial the last call	the button twice in idle mode.
answer a call	and hold the button
end a call	and hold the button

Entering text

The phone allows you to enter characters for messages and names in Chinese and English. To enter Chinese text, the phone provides several widely used pronunciation based (Pinyin) and character shape based (Stroke) input methods to meet the preferences of different users, allowing for greater convenience and ease of use.

You can also enter any combination of Chinese characters, alphabets, numbers, and special symbols including punctuation marks.

The following text input modes are available on your phone:

- Chinese Pinyin mode
- Chinese simplified stroke mode
- Quick English mode (T9 mode)*
- English mode
- Chinese traditional stroke mode
- Number mode
- Symbolic mode

Note: Each input mode can be used when writing on the touch pad. For more information about this, see page 11.

Directions for using each of the text input modes appear later in this section.

* T9 is a registered Trademark of Tegic Communications, Inc. and is licensed under U.S. Patent 5,818,437/ 5,953,541/6,011,554.

Changing the text input mode

When you are in a field that allows characters to be entered, you will see the text input mode indicator at the bottom of the display.

Example: Entering a name in Phonebook

To change to another text input mode:

1. Press the right soft key indicating the current text input mode.

2. Scroll to the mode you want to use by pressing the Up or Down key.

   You can use the **Add word** option to add new words into the T9 dictionary (Quick English mode). See page 49.

3. Press the **Select** soft key to confirm the highlighted text input mode.

   Note: If you want to exit the menu without changing input modes, press the soft key or key.

4. The selected text input mode indicator appears at the bottom of the display.

Using the touch pad

You can use the touch pad when you input English or Chinese character(s). This touch pad is used to input English or Chinese characters, numbers, or symbols, to name of phonebook entry or photo, or in a memo, To do list item, or URL address. This is also where you enter words that you are looking up in a dictionary.

To write on the touch pad:

1. Slide the stylus pen out of its storage slot.
2. Write directly on the touch pad with the stylus pen.

   You will see another input window showing what you have written.
3. When you have finished writing, lift the stylus pen form the touch pad surface.

Note: depending on your input mode, the drawing displayed on the touch pad input window will be converted into the appropriate characters. See the table below.

Input Mode	Resulting characters
Pinyin	English
CHN S Stroke	Simplified Chinese
Quick English	English
English	English
CHN T Stroke	Traditional Chinese
Number	Number
Symbolic	Symbol

Using Chinese Pinyin mode

Pinyin is a system writing Chinese words using the English alphabet. This system is based on the pronunciation of the Chinese word. With the Pinyin input method, you can enter Chinese characters by entering in the pinyin string from the phone's keypad or touchpad, and the phone automatically presents the matching alternatives.

This mode allows you to enter Pinyin characters with only one key press per letter.

Entering characters in Pinyin mode

1. Press the keys which correspond to the sound of the word, entering it phonetically by, referring to the English letters printed on the keys. Notice that the choices in the character selection field change.

   Example: Typing '力' in Pinyin mode

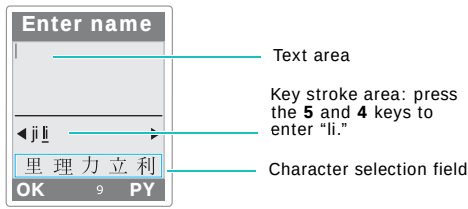

2. If there are is more than one Pinyin spelling corresponding to your key strokes, press the Left or Right key to select the spelling you want.

3. If you cannot find the character you want from those displayed, press the Up or Down key to scroll through choices in the character selection map.

When the character you are typing appears in the character selection field, you may select it, without completing the Pinyin spelling or entering the tone for the character.

4. To select a character, press the **1** key to activate the character selection field. Each displayed character is numbered, **1** to **5**. With the character selection field active, pressing the appropriate number key selects the corresponding character.

Notes: To remove the activate character from the character selection field, press the **C** key.

Scrolling

To move the cursor left or right through your text message, press the Left or Right key.

Inserting a space

To insert a space between characters, press the # key in the Text Area.

Clearing strokes and characters

Press the **C** key one or more times to remove the character(s) to the left of the cursor. Once the Pinyin Area is empty, pressing the **C** key removes characters from the Text Area.

Using Chinese stroke modes

These modes allow you to enter individual Chinese strokes, in written order; from top to bottom, and from left to right. Your phone provides Chinese simplified Stroke mode (**CHN S Stroke**) and Chinese traditional Stroke (**CHN T Stroke**) mode.

The two modes work similarly, but the characters that appear on the display may differ.

Even though there are many different strokes used to create Chinese characters, the strokes are classified into 5 basic categories; heng, shu, pie, dian, and zhe. The basic strokes are printed on the **1** to **5** keys on the keypad.

To enter a stroke, press the key printed with the stroke that most closely represents the stroke you want.

The table shows the stroke/key relationship:

笔画种类	键	代表笔画
一	1	一 ㇀
丨	2	丨 亅
丿	3	丿 𠂉
丶	4	丶 乀 乛
㇏	5	𠃌 乚 乙 𠄌 亅 𠃍 𠃋 𠃊 𠄎 乃 乜 丷 𠃍 𠂆 𠂇 𠃌 𠃊 𠃋 𠄎 乃

Typing strokes and characters in stroke mode

1. To type a character, press the keys that correspond to its component strokes. Press the keys in the order that you would write the strokes, using one press per stroke.

   Example: Typing '力' in Chinese traditional stroke mode

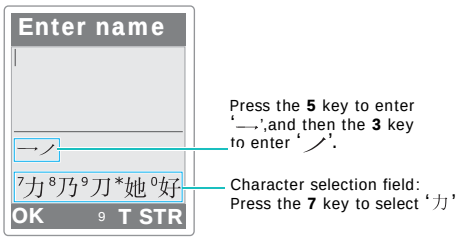
Enter name
一ノ
7力8乃9刀*她0好
OK
9
T STR
Press the 5 key to enter '一',and then the 3 key to enter 'ノ'.
Character selection field: Press the 7 key to select '力'

2. The phone displays your strokes in the key stroke area and offers character choices in the character selection field. As you enter strokes, notice that the choices in the character selection field change.

   To scroll through the choices in the character selection field, press the Up or Down key.

   Note: If you are uncertain of the order of one or more strokes, press the **6** key in place of each questionable stroke. Continue entering strokes until the character is displayed in the character selection field or until you finish the character.

3. When the character you are typing appears in the character selection field, you may select it without finishing the stroke sequence for the character. Each character displayed in the character selection field is numbered, **7** to **0** and ✳. To select a character from the character selection field and add it to your message, simply press the appropriate key.

Scrolling

To move the cursor left or right through your text, press the Left or Right key.

Inserting a space

To insert a space between characters, press the # key in the Text Area.

Clearing strokes and characters

Press the **C** key one or more times to remove strokes to the left of the cursor. Once the Stroke Area is empty, pressing the **C** key removes characters from the Text Area.

Using Quick English mode

To input a word, press the keys that correspond to the letters you need. Remember the following as you are inputting:

1. Start entering the word by pressing keys **2** to **9**. Press each key only once for each letter.

Example: To enter 'hello' in Quick English mode, press the **4**, **3**, **5**, **5**, and **6** keys.

The word you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting any keystrokes.

3. If the word is correct, start entering the next word. Otherwise, while the word is highlighted, press the **0** key repeatedly to display alternative word choices for the keys that you have pressed.

   Example: Both 'of' and 'me' have the sequence of **6** and **3**. The phone displays the most commonly used choice first.

4. Insert a space between words by pressing the # key.

5. Enter the next word.

If **Spell** appears above the left soft key while you are entering text, the word does not exist in the Quick English dictionary. To type words not found in the Quick English dictionary, change the text input mode to English mode, or proceed as follows:

1. Press the **Spell** soft key, or press the right soft key and select the **Add word** option.

2. Enter the word you want to add using English mode (see page 52) and press the **OK** soft key.

   The word is saved in the T9 dictionary and inserted in the input field.

3. Continue entering other words in Quick English mode.

Smart punctuation

To enter periods, hyphens, or apostrophes, press the **1** key. T9 mode applies rules of grammar to insert the correct punctuation.

Example: The **1** key is used twice to display two punctuation marks.



Changing the case

To change the case of the next letter(s) that you enter, press the * key. There are three cases:

- Lower Case (no indicator)
- Initial Capital (⇧)
- Capital Lock (⇪)

Scrolling

To move the cursor to the left or right within the text, press the Left or Right key.

Clearing letters and words

Press the **C** key one or more times to clear letters to the left of the cursor. Press and hold the **C** key to clear the display.

Using English mode

When inputting words in English mode, press the key labelled with the required letter:
- Once for the first letter
- Twice for the second letter
- And so on

Example: To display the letter “C”, quickly press the **2** key three times. To display the letter “K”, press the **5** key twice. This method is called Multi-tap typing.

Note: The cursor moves to the right when you press a key. When entering the same letter twice or a different letter on the same key, just press the Right key, or simply wait a few seconds for the cursor to move to the right automatically, and then enter the next letter.

Refer to the table below for more information about the characters available:

按键	依次显示的字符	
	大写	小写
1	: ; ¿ ¡ 1 = ” /	. , ? ! 1 – ’ @ :
2	A B C 2 Ä Æ Å Γ	a b c 2 à ä æ å ç
3	D E F 3 É Δ	d e f 3 é è
4	G H I 4 Θ	g h i 4 ì
5	J K L 5 Λ	j k l 5
6	M N O 6 Ñ Ö Ø Ξ	m n o 6 ñ ò ö ø
7	P Q R S 7 Π Σ	p q r s 7 ß
8	T U V 8 Ü Φ	t u v 8 ù ü
9	W X Y Z 9 Ψ Ω	w x y z 9
0	0 * < > % # £	0 + ( ) & _ $

Changing the case

To change the case of the next letter(s) that you enter, press the * key. There are three cases:

- Lower Case (no indicator)
- Initial Capital (⇧)
- Capital Lock (⇧)

Inserting a space

To insert a space between characters, press the # key.

Scrolling

To move the cursor to the left or right within the text, press the Left or Right key.

Clearing letters and words

Press the **C** key one or more times to clear letters to the left of the cursor. Press and hold the **C** key to clear the display.

Using number mode

Number mode enables you to enter numbers in your text. Press the keys corresponding to the digits you want to enter.

Using symbolic mode

Symbolic mode enables you to enter symbols in your text.

To	Press the
display more symbols	Up or Down key.
enter a symbol	corresponding number key.
return to the previous text input mode	**OK** or soft key.

Note: You can not enter some symbolic characters with the touch pad, use the keypad to enter them.

Using the menus

The phone offers a range of functions that allows you to tailor the phone to your needs. These functions are arranged in menus and sub-menus.

Accessing a menu function

The menus and sub-menus can be accessed by pressing the **Menu** or **Phonebook** soft key in idle mode, then scrolling with the navigation keys.

1. In idle mode, press the **Menu** soft key to access the main menu or press the **Phonebook** soft key to access Phonebook menu.

2. Scroll through the menus using the navigation keys and press **Select** soft key to enter the menu you want.

3. Find the sub-menu that you wish to use by scrolling with the Up or Down key.

4. Press the **Select** soft key to access the sub-menu.

   If the menu that you have selected contains further sub-menus, repeat steps 3 and 4.

5. Scroll to the option you want to choose with the Up or Down key.

6. Press the **Select** soft key to choose the setting.

Note: You can return to the previous menu level by pressing the ↩ soft key.

You can also access the menus and sub-menus by quickly entering the corresponding menu number.

Example: Accessing the **Voice mail** menu option, press the **Menu** soft key and **5**, **5** in idle mode.

List of menu functions

Various menus let you check or change your phone settings. The following list shows the menu structure.

The numbers assigned to each menu option may not match the menu number on the phone. It depends on the services supported by your SIM card.

Phonebook menu

1. Phonebook **(see page 62)**

- 1.1 Find name
- 1.2 Add entry
- 1.3 Group search
- 1.4 Speed-dial list
- 1.5 Copy all to phone
- 1.6 Send all via infrared
- 1.7 Delete all

2. Management **(see page 72)**

- 2.1 Own number
- 2.2 Group setting
- 2.3 Memory status

3. Services **(see page 74)**

- 3.1 Service directory

Main menu

1. SIM-AT (SIM Application Toolkit)*
(see page 75)

2. Call records (see page 76)

- 2.1 Missed calls
- 2.2 Received calls
- 2.3 Dialled calls
- 2.4 Delete all
- 2.5 Call time
  - 2.5.1 Last call time
  - 2.5.2 Total sent
  - 2.5.3 Total received
  - 2.5.4 Total call time
  - 2.5.5 Reset timers
- 2.6 Call costs*
  - 2.6.1 Last call cost
  - 2.6.2 Total cost
  - 2.6.3 Max cost
  - 2.6.4 Reset counters
  - 2.6.5 Set max cost
  - 2.6.6 Price/Unit

3. Network services (see page 80)

- 3.1 Call diverting
  - 3.1.1 Divert always
  - 3.1.2 Busy
  - 3.1.3 No reply
  - 3.1.4 Unreachable
  - 3.1.5 Cancel all
- 3.2 Call barring
  - 3.2.1 All outgoing
  - 3.2.2 International
  - 3.2.3 International except to home
  - 3.2.4 All incoming
  - 3.2.5 Incoming while abroad
  - 3.2.6 Cancel all
  - 3.2.7 Change barring password

*Shown only if it is supported by your SIM card.

3.3 Call waiting
3.4 Network selection
3.5 Caller ID
3.6 Active line*

4. Sound settings (see page 87)

4.1 Incoming calls
    4.1.1 Default melodies
    4.1.2 My sounds
    4.1.3 Ring volume
    4.1.4 Alert type
4.2 Messages
    4.2.1 Short messages
    4.2.2 Multimedia messages
4.3 Power on/off
4.4 Connection tone
4.5 Key tone
4.6 Minute minder
4.7 Quiet mode
4.8 Folder tone
4.9 On-time alarm
4.10 Alerts on call

5. Messages (see page 93)

5.1 Short messages
    5.1.1 Create
    5.1.2 Inbox
    5.1.3 Outbox
    5.1.4 Delete all
    5.1.5 Group delete
5.2 Multimedia messages
    5.2.1 Create
    5.2.2 Inbox
    5.2.3 Outbox
    5.2.4 Draft
    5.2.5 My folder
    5.2.6 Delete all

*Shown only if it is supported by your SIM card

5.3 Push messages
- 5.3.1 Inbox
- 5.3.2 Setting
- 5.3.3 Delete all

5.4 Preset messages

5.5 Voice mail
- 5.5.1 Connect to voice mail
- 5.5.2 Voice server number

5.6 Broadcast
- 5.6.1 Read
- 5.6.2 Receive
- 5.6.3 Channel
- 5.6.4 Language

5.7 Settings
- 5.7.1 Short messages
- 5.7.2 Multimedia messages

5.8 Memory status
- 5.8.1 Short messages
- 5.8.2 Multimedia messages

6. Fun box (see page 120)

6.1 WWW services*
- 6.1.1 Home
- 6.1.2 Bookmark
- 6.1.3 Go to URL
- 6.1.4 Clear cache
- 6.1.5 Proxy settings
- 6.1.6 Current proxy

6.2 Fun club
- 6.2.1 SFC home
- 6.2.2 Service area

6.3 Media box
- 6.3.1 Photos
- 6.3.2 Images
- 6.3.3 Sounds
- 6.3.4 Delete all
- 6.3.5 Group delete
- 6.3.6 Memory status

* May not be shown or supported by your network service provider.

6.4 JAVA world
6.4.1 Downloads
6.4.2 Internet settings
6.4.3 Memory status

7. Organiser (see page 136)

7.1 New memo
7.2 Calendar
7.3 To do list
7.4 Clock
7.4.1 Set time
7.4.2 Set date
7.4.3 Set world time
7.4.4 Set format
7.5 Alarm
7.6 Calculator
7.7 Conversion
7.7.1 Length
7.7.2 Weight
7.7.3 Volume
7.7.4 Area
7.7.5 Temperature
7.8 Timer
7.9 Stopwatch
7.10 Dictionary

8. Camera (see page 152)

8.1 Take photos
8.2 My photos
8.3 My albums
8.4 Delete all
8.5 Group delete
8.6 Settings
8.7 Memory status

9. Phone settings (see page 162)

- 9.1 Display
  - 9.1.1 Wallpaper
  - 9.1.2 Front LCD
  - 9.1.3 Skin
  - 9.1.4 Backlight
  - 9.1.5 LCD brightness
  - 9.1.6 Service light
- 9.2 Greeting message
- 9.3 Language
- 9.4 Security
  - 9.4.1 PIN check
  - 9.4.2 Change PIN
  - 9.4.3 Phone lock
  - 9.4.4 Change password
  - 9.4.5 Privacy
  - 9.4.6 SIM lock
  - 9.4.7 FDN mode*
  - 9.4.8 Change PIN2*
- 9.5 Auto redial
- 9.6 Voiceclarity
- 9.7 Active folder
- 9.8 Anykey answer
- 9.9 Side key
- 9.10 Infrared activation
- 9.11 Reset settings
  - 9.11.1 Sound settings
  - 9.11.2 Phone settings
  - 9.11.3 All settings

* Shown only if it is supported by your SIM card.

Phonebook menu

Phonebook offers the following features:

- **Phonebook**: allows you to find, create, and set up the speed-dialling feature, and manage Phonebook entries.
- **Management**: allows you to create or remove your own number, set up caller groups, and check the memory status.
- **Services**: allows you to use the service directory depending on the features of your SIM card.

Find name *(Phonebook 1.1)*

To search for a number in Phonebook, proceed as follows.

1. Enter the initial letter(s) of the name that you want to find.

   The Phonebook entries are listed, highlighting the entry matching your input.

2. If necessary, press the Up or Down key to scroll to the entry you want.

3. Once you have found the entry, press the **OK** soft key.

4.

To	Press the
dial the displayed number	key.
change the Phonebook entries	**Options** soft key. For further details, see page 63.

Editing phone memory information

Scroll to the category that you want to edit by pressing the Left or Right key. Following categories are available and you can edit information of each category by pressing the **Options** soft key.

Category	Then
Mobile Home Office Fax Other	Select one of the following options. For details for these options, refer to the page 64. **Edit number** **Change name** **Send message** (shown if the category contains a number) **Copy** (shown if the category contains a number) **Send via infrared** (shown if the category contains a number) **Delete entry**
E-Mail	Enter or edit e-mail address.
Note	Enter or edit the memo.
Group	Set one of the groups or no group.
Graphic	Set one of the images or no image.
Alert	Set one of the melodies or do not assign a melody.

Editing SIM memory entries

To change the SIM memory entry information, press the **Options** soft key.

The following options are available:

Edit number

This option allows you to change the number. You can also add a new number if none has been stored for the selected entry.

Change name

This option allows you to change the name of the entry.

To clear the old name, press the **C** key. For more information about how to enter characters, see page 42.

Send message

This option allows you to send a message to the number. For more information about how to send a message, see page 94.

Copy

This option allows you to copy the entry from the phone's memory to the SIM card, and vice versa.

Send via infrared

This option allows you to copy the entry from your SIM card to another device that has the IrDA via infrared.

Delete entry

This option allows you to delete the entry from Phonebook. To confirm the deletion, press the **Yes** soft key. Otherwise, press the **No** soft key.

Add entry *(Phonebook 1.2)*

You can store phone numbers and the corresponding names in the memory of your SIM card. In addition, you can store up to 1000 names in the phone's memory, and each name can be associated with up to five numbers.

1. Enter the number you want to save.

   Notes:
   - If you make a mistake while entering a number, correct it using the **C** key. For further details, see page 28.
   - To insert a dialling pause for special phone services, such as banking by phone, hold down the * key. "P" is displayed to indicate the a pause will be inserted at that point in the dialling.

2. When you are sure that the number is correct, press the **Save** soft key.

3. Select the memory where the number is to be stored, either **Phone** or **SIM**, and press the **Select** soft key.

   Note: If you change phones, any numbers stored in your SIM card will automatically be available with the new phone, whereas any numbers stored in the phone's memory must be entered again.

4. If you select **SIM** in step 3, go to step 5.

   If you select **Phone** in step 3, choose a number type using the Up or Down key and press the **Select** soft key.

5. Enter the associated name.

   For information about how to enter characters, see page 42.

6. When you are satisfied, press the **OK** soft key.

7. If you select **Phone** in step 3, go to step 8.

   If you select **SIM** in step 3, enter the location number and press the **OK** soft key.

8. If you want to change the entry, use the options. for information about how to do it, see page 63.

   If you want to return to idle mode, press the soft key or the key.

Storing a number in idle mode

As soon as you start to enter a number in idle mode, **Save** appears above the left soft key to allow you to store the number in the Phonebook.

Continue the procedure from step 1 on page 65 to store the number.

Group search *(Phonebook 1.3)*

You can search for a number from the ten predefined caller groups.

1. Select a caller group by pressing the Up or Down key and press the **Select** soft key.

2. The Phonebook entries in the selected caller group are listed.

3. Once you have found the entry, press the **Select** soft key.

4.

To	Press the
dial the displayed number	key.
change the Phonebook entries	**Options** soft key. For further details, see page 63.

Speed-dial list *(Phonebook 1.4)*

You can set up to eight speed-dial entries and then dial them easily whenever you want, simply by pressing the associated number key.

Setting up speed-dial entries

1. Press the Up or Down key to scroll to an empty location and press the **Select** soft key.
2. When the **Edit number** option highlights, press the **Select** soft key.
3. Enter a phone number and press the **OK** soft key. Or,

   To retrieve a number from your Phonebook, press the **Phonebook** soft key. Select an entry from the list and press the **OK** soft key. Press the **OK** soft key to save it.
4. When you have finished, press the soft key or the key to exit.

Editing speed-dial entries

1. Select the speed-dial entry you want to edit from the list and press the **Select** soft key.

2. Select one of the following menu options by pressing the Up or Down key and press the **Select** soft key:

   - **Edit number**: allows you to change the number.
   - **Change name**: allows you to change the name of the entry.
   - **Delete**: allows you to clear the setting so that no number is assigned to the key.

3. When you have finished, press the soft key or the key to exit.

Using the speed-dial feature

When the idle screen is displayed, press the number key, **2** to **9**, assigned to the speed-dial entry and press the key. You can also press and hold the number key.

Note: The **1** key is reserved for your voice mail server number.

Dialling a number stored in the SIM card

Once you have stored phone numbers in your SIM card, you can dial them easily whenever required.

To dial a number stored in the SIM card:

1. Enter the number of the SIM card location where the number you want to dial is stored.

2. Press the # key.

   The display shows the name and number stored in that location.

3. Press the **Dial** soft key or the key.

Copy all to phone *(Phonebook 1.5)*

You can copy all of the numbers stored in the SIM card to the phone's memory.

1. When a confirming message appears, press the **Yes** soft key to copy.

   The numbers in the SIM card are copied to the phone's memory, labelled with **Mobile** by default.

   Otherwise, press the **No** soft key.

2. When you have finished, press the soft key or the key to exit.

Send all via infrared *(Phonebook 1.6)*

Via the infrared connection, you can send your Phonebook entries to another IrDA- compliant devices and vice versa.

Note: This feature may not be available depending on the devices.

Sending your phonebook

1. Align the IrDA ports on both sides each other.

2. Access the **Send all via infrared** menu option in the **Phonebook** menu and choose one of the following options and press the **Select** soft key:
   - **All**: allows you to send all of the entries, from the entry you choose to the end of the SIM card and Phone list.
   - **SIM**: allows you to send all of the entries, from the entry you choose to the end of the SIM card list.
   - **Phone**: allows you to send all of the entries, from the entry you choose to the end of the Phone list.
3. When you select **All** and press the **OK** soft key, your phone displays all of the Phonebook entries.

   When you select **SIM** or **Phone** and press the **OK** soft key, all of the entries stored in the corresponding memory location are listed.
4. Scroll to the entry you want to send as beginning and press the **OK** soft key.
5. Your phone begins sending the entry(ies).

Receiving phonebook from another device

1. Align the IrDA ports on both sides each other.
2. Access the **Infrared activation** menu (see page 170) and select **On** to activate the port.
3. When your phone receives Phonebook data from the other device:

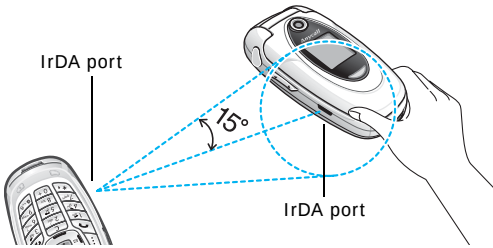

If the other person sends you one entry, your phone displays the name and the phone number and you can specify whether or not you want to save it. Continue to step 4.

If the person sends you the entries by **All**, **SIM**, **Phone**, you can select a memory location, SIM card or phone's memory. Continue to step 5.

4. Press the **Save** soft key to store the entry.

   You can also discard the entry by pressing the **Cancel** soft key.

5. Press the **SIM** or **Phone** soft key.

6. The entries are saved in the appropriate memory.

Delete all *(Phonebook 1.7)*

You can delete Phonebook entries selectively depending on the memory location, or all entries at once.

1. Scroll to a desired memory selection and place a check mark ahead of it by pressing the **Select** soft key.

Selecting **All** places check marks on both of the memory sites.

2. If necessary, repeat step 1 to check another option.

3. When you have finished checking, press the **OK** soft key.

4. When a confirming message appears, press the **Yes** soft key to delete all of the entries in the memory or memories. Then enter the phone password and press the **OK** soft key.

   The password is preset to “00000000” by default. To change it, see page 166.

   Otherwise, press the **No** soft key.

Own number *(Phonebook 2.1)*

To store your own phone number(s) with a name:

1. Scroll to an empty location by pressing the Up or Down key and press the **Select** soft key.

2. When **Edit number** highlights, press the **Select** soft key.

3. Enter your number and press the **OK** key.

4. To assign a name, press the Down key to move to **Change name** and press the **Select** soft key.

5. Enter a name and press the **OK** soft key.

6. When you have finished, press the ↩ soft key or the key to exit.

To remove one of your numbers:

1. Select the entry you want to delete from the Own number list and press the **Select** soft key.
2. Scroll to **Delete** by pressing the Up or Down key and press the **Select** soft key.
3. When a confirming message appears, press the **Yes** soft key to delete the number.

   Otherwise, press the **No** soft key.
4. When you have finished, press the soft key or the key to exit.

Group setting *(Phonebook 2.2)*

You can change the settings of the ten predefined caller groups.

1. Select a caller group by pressing the Up or Down key and press the **Select** soft key.
2. Scroll to a setting option by pressing the Up or Down key and press the **Select** soft key.

   The following options are available:

   - **Melody**: allows you to select a melody to sound when a call comes in from a member in the group.
   - **Change name**: allows you to change the name of the group; for further details about how to enter characters, see page 42.
   - **View image**: shows the image to display when a call comes in from a member in the group.

3. Change the setting as required and press the **Select** soft key.

4. Repeat steps 2 and 3 to change other options.

   When you have finished, press the soft key or the key to exit.

Memory status *(Phonebook 2.3)*

You can check how many names and numbers are stored in Phonebook, phone's memory, SIM card, and how many free locations remain.

When you have finished, press the soft key or the key to exit.

Service directory *(Phonebook 3.1)*

Note: This feature may not be available depending on your SIM card.

The display shows the list of the numbers in the Service directory.

If necessary, scroll to a number by pressing the Up or Down key and press the key to dial the number.

SIM-AT (SIM Application Toolkit)

If you use a SAT card that provides additional services, the SAT menu displays. For further details, see your SIM card instructions.

Shown only if it is supported by your SIM card.

Call records

Via this menu, you can view the:

- calls you missed, received or dialled.
- cost of your calls.
- length of your calls.

Note: You can access the numbers in the three types of call records by pressing the key in idle mode.

Missed calls *(Menu 2.1)*

This option lets you view the last 20 unanswered calls if the caller line identification is available.

The number, or name if available, displays together with the date and time when the call was missed.

By pressing the **Options** soft key, you can also:

- delete the current call record from the list.
- delete all of the calls.
- paste the number into Phonebook.

Received calls *(Menu 2.2)*

This option lets you view the last 20 received calls if the caller line identification is available.

The number, or name if available, displays together with the date and time when the call was received.

By pressing the **Options** soft key, you can also:

- delete the current call record from the list.

- delete all of the calls.
- paste the number into Phonebook.

Dialled calls *(Menu 2.3)*

This option lets you view the last 20 dialled numbers.

The number, or name if available, displays together with the date and time when the call was made.

By pressing the **Options** soft key, you can also:

- delete the current call record from the list.
- delete all the calls.
- paste the number into Phonebook.

Delete all *(Menu 2.4)*

You can delete all of the numbers stored in each call record.

When a confirming messages appears, press the **Yes** soft key to confirm.

Otherwise, press the **No** soft key.

Call time *(Menu 2.5)*

This option lets you view the timers for calls made and received.

Notes:
- If your SIM card supports the ALS (Alternate Line Service) feature, you must first select the appropriate line.
- The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing purposes and others.

The following timers are available:

Last call time: the length of the last call.

Total sent: the total length of all calls made since the timer was last reset.

Total received: the total length of all calls received since the timer was last reset.

Total call time: the total length of all calls made and received since the timer was last reset.

Reset timers: the option used to reset the call timers. You need to enter the phone password and then press the **OK** soft key.

Call costs *(Menu 2.6)*

This feature lets you view the cost of calls.

Notes:
- Shown only if it is supported by your SIM card.
- This feature is not intended to be used for billing purposes.
- AOC (Advice Of Charge) information may display in idle mode, depending on your SIM card or service provider.

The following options are available:

Last call cost: cost of the last call made.

Total cost: total cost of all calls made since the cost counter was last reset. If the total cost exceeds the maximum cost set via the **Set max cost** option, you can no longer make any calls until you reset the counter.

Max cost: maximum cost set via the **Set max cost** option.

Reset counters: option used to reset the cost counter; you must first enter your PIN2 (see page 177) and then press the **OK** soft key.

Set max cost: option used to enter the maximum cost that you authorise for your calls; you must first enter your PIN2 (see page 177) and then press the **OK** soft key.

Price/Unit: option used to set the cost of one unit; this price per unit is applied when calculating the cost of your calls; you must first enter your PIN2 (see page 177) and then press the **OK** soft key.

Network services

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call diverting *(Menu 3.1)*

Note: Call divert options may be different depending on your SIM card. Those not supported by your network operator may not be shown on your phone.

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holiday.

Call diverting can be set up in the following ways:

Divert always: all calls are diverted.

Busy: calls are diverted if your phone is engaged on another call.

No reply: calls are diverted if you do not answer the phone.

Unreachable: calls are diverted if you are not in an area covered by your service provider.

Cancel all: all call diverting options are deactivated.

You can specify individual call diverting options for each of the following call types:

- Voice calls only
- Data calls only (not available when line 2 is in use)

Example: You can divert voice calls to your colleague if you are already using the phone.

Setting call diverting options

1. Select the type of call diverting by pressing the Up or Down key and then press the **Select** soft key.
2. Select the type of calls to be diverted by pressing the Up or Down key and then press the **Select** soft key.
3. Press the **Activate** soft key to confirm your settings.
4. Enter the number to which the calls are to be diverted.

   To enter an international code, hold down the **0** key until the + sign displays.

   You can also select a number in Phonebook or the voice mail server number, by pressing the **Options** soft key, followed by **Phonebook** or **Voice server**.
5. When you are satisfied, press the **OK** soft key.

   The phone sends your settings to the network and displays the network's acknowledgement.

Deactivating specific call diverting options

1. Select the call diverting option to be deactivated.
2. Select the type of calls to which this option applies.

3. Press the **Remove** soft key.

   The phone sends your settings to the network and displays the network's acknowledgement.

You can also deactivate all call diverting options by selecting the **Cancel all** option.

Call barring *(Menu 3.2)*

The call barring network service allows you to restrict your calls.

Call barring can be set up in the following ways:

All outgoing: calls cannot be made.

International: international calls cannot be made.

International except to home: when abroad, calls can be made only to numbers within the current country and to your home country, that is the country where your home network provider is located.

All incoming: calls cannot be received.

Incoming while abroad: calls cannot be received when you are using your phone outside the country of your service network.

Cancel all: all call barring options are deactivated; calls can be made and received normally.

You can specify individual call barring options for each of the following call types:

- Voice calls only
- Data calls only (not available when line 2 is in use)

Setting call barring options

1. Select the type of call barring by pressing the Up or Down key and then press the **Select** soft key.
2. Select the type of calls to be barred by pressing the Up or Down key and then press the **Select** soft key.
3. Press the **Activate** soft key to confirm your settings.
4. Enter the call barring password supplied by your service provider and press the **OK** soft key.

   The phone sends your settings to the network and displays the network's acknowledgement.

Deactivating specific call barring options

1. Select the call barring option to be deactivated.
2. Select the type of calls to which this option applies.
3. Press the **Deactivate** soft key.
4. Enter the call barring password supplied by your service provider.

   The phone sends your settings to the network and displays the network's acknowledgement.

You can also deactivate all call barring options by selecting the **Cancel all** option.

Changing the barring password

You can set and change the call barring password obtained from your service provider.

1. Select **Change barring password** from the Call barring screen, and press the **Select** soft key.
2. Enter the current password and press the **OK** soft key.
3. Enter a new password and press the **OK** soft key.
4. Enter the new password again to confirm it and press the **OK** soft key.

Call waiting *(Menu 3.3)*

This network service informs you when someone is trying to reach you while you are on another call.

You can specify individual call waiting options for each of the following call types:

- Voice calls only
- Data calls only (not available when line 2 is in use)

Activating the call waiting feature

1. Select the type of calls to which the call waiting option is to be applied by pressing the Up or Down key and then press the **Select** soft key.
2. Press the **Activate** soft key to confirm your settings.

   The phone sends your settings to the network and displays the network's acknowledgement.

Deactivating specific call waiting options

1. Select the type of call to which the option applies.

2. Press the **Deactivate** soft key.

   The phone sends your settings to the network and displays the network's acknowledgement.

You can also deactivate all call waiting options by selecting the **Cancel all** option.

Network selection *(Menu 3.4)*

The Network selection feature enables you to manually select the network used when roaming outside your home area or to let the phone automatically select the roaming network.

Note: You can select a network other than your home network only if it has a valid roaming agreement with your home network.

To choose to automatically or manually select the network when roaming:

1. Press the Up or Down key until the appropriate option highlights and press the **Select** soft key.

   If you select **Automatic**, you are connected to the first available network when roaming.

   If you select **Manual**, the phone scans for the available networks. Go to step 2.

2. Press the Up or Down key until the preferred network highlights and press the **Select** soft key.

Caller ID *(Menu 3.5)*

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow the user to change this setting.

The following options are available:

Default: the default setting provided by the network is used.

Hide number: your number does not display on the other person's phone.

Send number: your number is sent each time you make a call.

Active line *(Menu 3.6)*

Some SIM cards may be used with two subscriber numbers. This functions is available only if your SIM card supports it.

This menu option allows you to select the line to be used to make calls. However, calls can be answered on both lines, regardless of the selected line.

Sound settings

You can use the Sound settings feature to customise various settings, such as the:

- ringtone, volume and type for incoming calls or messages.
- sounds made when your call is connected or when you press a key.
- quiet mode which your phone switches to when you hold down the # key in idle mode.

Incoming calls *(Menu 4.1)*

This option allows you to set up the ringer for incoming calls.

Note: If your SIM card supports the ALS (Alternate Line Service) feature, you must select the line you wish to change first.

The following options are available:

Each time you select a melody from the list, it plays the melody.

Default melodies: allows you to select one of the predefined melodies.

My sounds: allows you to select one of the sounds received from other sources, such as the WAP sites, the EasyStudio PC software or multimedia messages.

Ring volume: allows you to adjust the ring volume. Use the Up and Down keys or the volume keys on the left side of the phone. The more bars you see, the louder the volume you hear.

Alert type: lets you specify how you are informed of any incoming calls.

Melody: the phone rings using the melody selected via the **Default melodies** and **My sounds** option. See above.

Vibration: the phone vibrates but does not ring.

Vibration then melody: the phone first vibrates and then starts ringing.

Light only: only the text notification appears; the phone neither rings nor vibrates.

Messages *(Menu 4.2)*

This option allows you to set up the ringer for each incoming short message and multimedia message received.

Short messages / Multimedia messages

The following options are available:

Tone: lets you choose from many different tones. Each time you select a tone from the list, the tone is played.

Alert type: lets you specify how you are informed of any incoming messages.

Light only: only the text notification appears; the phone neither rings nor vibrates.

Tone: the phone rings using the tone selected via the **Tone** option. See above.

Vibration: the phone vibrates but does not ring.

Vibration then tone: the phone first vibrates and then starts ringing.

Repetition: allows you to specify how often the phone informs you of a new message. You can choose either **Once** or **Periodic**.

Power on/off *(Menu 4.3)*

This option allows you to select the melody that the phone sounds when you switch it on or off.

You can choose either **Classical** or **Future**. To turn the sound off, select **Off**.

Connection tone *(Menu 4.4)*

This menu option allows you to specify whether or not the phone beeps when the phone connects to the network.

The following options are available:

Off: the phone does not beep.

On: the phone beeps when your call is accepted.

Key tone *(Menu 4.5)*

This menu option allows you to select the tone that the keypad sounds when you press a dial key.

The following options are available:

Off: the keys do not make any sound.

Woman/Girl: each key, when pressed, makes a woman's/girl's voice.

Water drop/Ping pong/Drum: each key, when pressed, makes a different sound like playing the instrument.

Tone: each key, when pressed, makes a different sound.

Beep: each key, when pressed, makes the same sound.

To adjust the key tone volume, press the volume keys on the left side of the phone in idle mode.

Minute minder *(Menu 4.6)*

This menu option allows you to specify whether or not the phone beeps every minute during a call to keep you informed of the length of your call.

The following options are available:

Off: the phone does not beep.

On: the phone beeps every minute.

Quiet mode *(Menu 4.7)*

When you hold the # key down in idle mode, the phone switches to the quiet mode. You can specify whether the phone vibrates or mutes when in the quiet mode.

The following options are available:

Vibration: the phone vibrates rather than rings in the quiet mode.

Mute: the phone mutes sounds in the quiet mode.

Folder tone *(Menu 4.8)*

This menu allows you to select a tone that the phone sounds when you open or close the folder.

You can select various folder tones such as a **Bubble**, **Future**, **Chirp**, **Cricket**.

To turn the sound off, select **off**.

On-time alarm *(Menu 4.9)*

This menu option allows you to set an alarm to sound every hour on the hour during a selected period.

The following options are available:

Off: the on-time alarm does not sound.

Voice: a woman's voice states the current time.

Cuckoo: a cuckoo sounds off on the hour.

If you select the voice or cuckoo option, a screen displays on which you can select the time period during which you want the alarm to be active.

Alerts on call *(Menu 4.10)*

This menu allows you to choose whether or not the phone informs you when you receive a new message or when an alarm goes off during a call.

The following options are available:

Off: the phone doesn't alert you to incoming messages or alarms.

On: the phone alerts you with a beep. The alert occurs only in your earpiece, so the person with whom you are talking doesn't hear it.

Messages

This menu allows you to create, send, read, and save messages with the Short Message Service (SMS: text messages), Enhanced Message Service (EMS: messages including simple images, animations or melodies) and Multimedia Message Service (MMS: messages supporting the presentation of various media types, such as full colour images, polyphonic ring tones). Voice mails are also available.

Note: This feature is only available if your service provider's network supports it. Contact your service provider for more information.

Short messages *(Menu 5.1)*

Short message service (SMS) allows you to send and receive short text messages to and from other GSM mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to create short messages consisting of simple pictures, melodies, animations and stylized text, all of which adds a new dimension to simple text messages.

To send text messages by phone, you must obtain the number of the SMS centre from your service provider.

Receiving a new message

When you receive a new message, the New message icon ( ) and a text notification showing the number of the message appear on the display. You also hear an alert, depending on the message sound setting; for further details, see page 88.

To read the new message(s) immediately, press the **View** soft key. The list of messages appears.

Note: To clear the new message notification on the display, press the key.

Managing memory

Inbox and Outbox share a given amount of memory on your phone or SIM card. When the message memory is full, the New message icon ( ) blinks and an error message displays. (It disappears when you press the key, but it reappears if you don't delete any messages to free up some memory.) In this situation, you cannot receive any new messages, You must delete one or more messages to create space for incoming messages. You can do this by using the **Delete** option in Inbox or Outbox, or by using the **Delete all** option; for further details, see page 99.

Create *(Menu 5.1.1)*

Using this menu, you can write messages containing text, images, and melodies.

1. Create a message.

   On the first line of the display, you see the remaining number of characters you are able to enter, the designated number of the current message with the maximum number of messages you can create, and the font style you set in the **Text** option.

   Note: For further information about how to enter characters, see page 42.

2. While entering your message, press the **Options** soft key to use the following options.

   • **Send**: allows you to send the message. Refer to the next step.

- **Text**: allows you to format the text. Following text attributes can all be combined as required.

  Text size: Small/Medium/Large
  Text mode: Normal/Underscore/Strikethrough
  Bold: Off/On
  Italic: Off/On
  Alignment: Left/Center/Right

  Note: The text attributes you can use are different depending on whether you are entering English or Chinese.

- **Add media**: allows you to add pictures, animations and/or melodies to the message. Select a category: **Add picture**, **Add animation** or **Add melody**. You can then choose a factory-set object or an object that you have received from another source and stored in the Media box. See page 127.
- **Add from Phonebook**: allows you to add phone number(s) from the Phonebook to the message.
- **Add from bookmarks**: allows you to add WAP URL(s) from the Bookmark to the message.
- **Preset messages**: allows you to add a preset message to your text. Select one of nine messages stored in the **Preset messages** menu option (**Menu 5.4**) See page 112.
- **Save message**: allows you to save the message so that it can be sent later. You can read the message in the Outbox.

3. When you have finished entering your message, choose **Send** from the options.

4. Enter a destination number on the Address screen.

You can search for a number in Phonebook by pressing the **Phonebook** soft key.

Note: To clear part or all of your input, press or press and hold the **C** key. If or when there is no input, you can press and hold the **C** key to move to the previous screen.

To send the message up to 5 different destinations press the **select** soft key and repeat step 4.

5. When you have finished entering the numbers, press the **OK** soft key.

6. If the Enter centre screen displays, enter the SMS service centre number and press the **OK** soft key.

   You can store the SMS service centre number on your phone. For details, see page 115.

Note: If the message is not sent successfully, press the **Retry** soft key to try to send the message again. Or, press the **No** soft key and the **Save** soft key to save the message or exit the menu by pressing the **No** soft key.

Inbox *(Menu 5.1.2)*

Your phone receives incoming messages and saves them in the Inbox. SMS messages are usually saved on the SIM card, but if the SIM memory is full, the incoming messages will be saved in the phone's memory.

When the **Inbox** menu is selected, the list of messages received displays with the:

- sender's phone number, or name if stored in Phonebook.

- message status; for a read message, for a message to read or for an incomplete message.

To view a message, scroll to it and press the **Select** soft key. The screen shows the:

- date and time when the message was received.
- memory site where the message is stored: for the SIM card or for the phone's memory.
- message contents.

You can scroll to the next or previous message by pressing the Left or Right key.

To scroll through the message contents, press the Up or Down key. When you select on an object that includes a melody, the melody is played.

You can choose the following options by pressing the **Options** soft key:

Delete: allows you to delete the message.

Message reply: allows you to reply to a message.

Reply and delete: allows you to reply to a message you got and then that message is deleted.

Call back: allows you to call the sender back.

Cut address: extracts phone numbers, email addresses or URL addresses in the text, so that you can call the number or send a message to the number or save it in your Phonebook.

Send: allows you to send the message to another person.

Edit: allows you to edit the message.

Protection: protects the message from being deleted.

Extract media: you can save media (except predefined EMS animations and sounds) from the message into the Media box. You can then use these items when writing future messages; for further details, see page 95.

Transfer: allows you to transfer the message from the SIM card to the phone's memory or vice versa.

Register to blacklist: allows you to register the sender's number on a blacklist. For details, see page 116.

Outbox *(Menu 5.1.3)*

Outbox stores any messages that you have already sent, or just saved without sending.

When the **Outbox** menu option is selected, the list of messages you have sent or saved displays with the:

- recipient's phone number, or name if stored in Phonebook.
- message status; for a sent message or for a message to send.

To view a message, scroll to it and press the **Select** soft key. The screen shows the:

- message status; for a sent message or for a message to send.
- memory site where the message is stored: for the SIM card or for the phone's memory.
- message contents.

You can scroll to the next or previous message by pressing the Left or Right key.

To scroll through the message, press the Up or Down key.

You can choose the following options by pressing the **Options** soft key:

Delete: allows you to delete the message.

Cut address: extracts phone numbers, email addresses or URL addresses in the text, so that you can call the number or send a message to the number or save it in your Phonebook.

Send: allows you to send the message to another person.

Edit: allows you to edit the message.

Transfer: allows you to transfer the message from the SIM card to the phone's memory or vice versa.

Protection: protects the message from being deleted.

Delete all *(Menu 5.1.4)*

You can delete all messages stored in the SIM card and phone's memory.

1. Scroll to a message box and place a check mark next to it by pressing the **Select** soft key.

   Selecting **All** places check marks on all of the message boxes.

2. If necessary, repeat step 1 to check other boxes.

3. When you have finished making your selections, press the **OK** soft key.

4. When a confirming message appears, press the **Yes** soft key to delete all of the messages in the selected box(es).

   Otherwise, press the **No** soft key.

Group delete *(Menu 5.1.5)*

You can delete messages stored in the Inbox and Outbox selectively.

1. Select the Inbox or Outbox by pressing the **Select** soft key.
2. Scroll to a message and place a check mark next to it by pressing the **Select** soft key.

   If you want to check what you select, press the key.

   Selecting **All** places check marks on all of the messages.
3. If necessary, repeat step 1 to check another box.
4. When you have finished checking, press the **OK** soft key.
5. When a confirming message appears, press the **Yes** soft key to delete all of the messages in the box(es).
   Otherwise, press the **No** soft key.

Multimedia messages *(Menu 5.2)*

Multimedia Message Service (MMS) is a messaging service very similar to Short Message Service (SMS). It provides asynchronous delivery of personal multimedia messages from between phone and phone, phone and e-mail, phone and web(by URL).

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice, and sounds. An MMS message is a multimedia presentation in a single entry. It is not a text file with attachments.

Using the MMS feature, your phone can receive multimedia messages. You can also send multimedia messages. This function is available only if it is supported by your service provider. Only phones that offer multimedia message features can receive and display multimedia messages.

Note: When you buy media content from the Internet, this content is delivered to you in MMS messages. You can retrieve the messages from the server and then save the items in your phone's memory. You can't forward these messages to other people or add the saved items to a MMS message.

Retrieving a new message

When you are retrieving a message, the Retrieving icon ( ) appears on the display. When you finish retrieving a new message, the New message icon ( ) and a text notification showing the number of the message appear on the display. You also hear an alert, depending on the message sound setting; for further details, see page 88.

To read the new message in idle mode, press the **View** soft key. You will see the Inbox contents. Select a message to view it.

Notes:

- When you set **Msg. reception** (see page 117) to **Automatic**, you cannot enter the **Downloads** menu (**Menu 6.4.1**) and also cannot access WAP sites while retrieving a new message. If a message comes in while you are playing a Java game, a notification message only will be delivered to your phone. After you have finished your game, you can retrieve the message by accessing the notification message.
- To clear the new message notification on the display, press the key.

If **Msg. reception** has been set to **Manual** (for details, see page 117), when the New message icon ( ) appears on the display, you must go to the Inbox to retrieve the message. You can select messages with the icon ( ) in the Inbox. Then you can retrieve or delete message using the **Opt.** soft key.

Managing memory

When the memory is full, the New message icon ( ) blinks and an error message displays. (It disappears when you press the key, but it reappears if you don't delete any messages to free up some memory.) In this situation, you cannot receive any new messages, You must delete one or more messages to create space for incoming messages. You can do this by using the **Delete** option in Inbox, Outbox, Draft, or My folder, or by using the **Delete all** option; for further details, see page 111.

Notes:
- You can only receive up to 150 messages.
- Multimedia message boxes, Camera, and Media box share a given amount of memory in your phone. You can also use the **Delete** or **Delete all** option to delete some sounds or images in Camera or Media box.

Create *(Menu 5.2.1)*

This menu option allows you to create a new multimedia message and then send it to one or multiple destinations.

1. There are four categories of items that can be added to multimedia messages: scroll to select the one that you want, and press the **Add** soft

key. Then proceed according to the instructions below.

Item	How to add
Subject	1. Enter a subject for your message. For details about entering characters, see page 42. 2. Press the **OK** soft key. **Note**: To move to a previous screen while entering a subject, delete all of the entered characters and hold down the **C** key
Picture	To add a new picture; 1. Select the **Create new** option. 2. Take a photo using the camera feature. For details about the camera feature, see page 152. 3. Select one of pictures you want to add. The picture is displayed. 4. Press the **Add** soft key. To add a picture in the Media box; 1. From the MMS images file, select the picture you want to add to the message. The picture will be displayed. 2. Press the **Add** soft key. You may not be able to add some downloaded images if they are not in the correct format.

Item	How to add
Sound	To add a new sound; 1. Select the **Record new** option. 2. Press the **Record** soft key to start recording. 3. Press the **Stop** soft key to stop recording. 4. Press the **Play** soft key to replay the sound. Or, press the **Add** soft key to add the sound. Enter a name for the sound and press the **OK** soft key. The sound will be both added to the message and saved in the Media box. To add a sound from Media box; 1. Select one of the sound storage sites. Sounds stored at the site are displayed. 2. Select the sound you want to add. 3. Press the **Select** soft key to add it. You may not be able to add some downloaded sounds if they are not in the correct format.

Item	How to add
Message	1. Enter a new message. Or you can enter a preset message. To enter a preset message; • Press the **Opt.** soft key and select **Preset messages**. • Select one of the preset messages. 2. Press the **Opt.** soft key and select **Done** to add the message. **Note**: To move to a previous screen while entering a message, press and hold the **C** key.

2. Press the **Opt.** soft key to use the following options.

- **Preview**: shows your message as it will display on the recipient's phone. To go back to the message screen, press the **Edit** soft key. To send the message, press the **Send** soft key and go to step 4.
- **Send**: allows you to send the message. Refer to the next steps.
- **Add page**: allows you to add up to 10 pages. You can move to each page using the Left or Right key on the message screen.
- **Page timing**: allows you to set how long one page of the message will display to the recipient before scrolling automatically to the next page.
- **Clear subject**/**picture**/**sound**/**message**: allows you to delete the subject, image, sound or message by selected work.
- **Delete page**: allows you to delete the current page.

- **Save message**: saves the message in **Draft** (see page 110) or **My folder** (see page 110).

Note: To go back to the edit screen, press the soft key or the **C** key.

3. When you finish creating the message, select **Send** from the options.
4. Select an entry on the Send screen.

   If the entry is empty, enter a destination as below. Select:

   Number: to enter a destination number.

   Email: to enter e-mail address.

   Phonebook: to enter a destination from phonebook.

   After entering a destination, press the **OK** soft key.

   If the entry is not empty, you can choose one of the following. Select:

   Edit address: to edit the selected address.

   Delete address: to delete the selected address.

Note: To clear part or all of your input, press or press and hold the **C** key, If there is no input displayed, press and hold the **C** key to move to the previous screen.

5. To send the message to up to 20 different destinations, repeat step 4.
6. When you have finished entering the numbers, press the **Send** soft key.

   Press the **Cancel** soft key to not send the message.

If transmission fails, press the **Retry** soft key to try again. Or, press the **Cancel** soft key to save the message.

Inbox *(Menu 5.2.2)*

Your phone receives incoming messages and saves them in the Inbox.

When the **Inbox** menu is selected, the list of messages received displays with the:

- message's subject, or no subject if the message has no subject.
- message status; for a retrieving message, for a read message, for an read message, for a read notification message, and for an unread notification message.

Note: There are several different message status icons (, ,) corresponding to the priority assigned to the message by the sender. (see page 116).

To view a message, scroll to it and press the **Select** soft key. But you cannot view the retrieving message.

To scroll through the message contents, press the Up or Down key. When the message has more than one page, you can press the Left or Right key to move through the pages, or the pages will cycle automatically according to time settings determined by the sender.

Notes:

- Your phone may not e able to play or display some types of sound or picture files.

- If an incoming message has a video clip attached, the attachment icon ( ) appears on the title line. You will not be able to view the attachment, nor extract it from the message.

While viewing a message, you can choose the following options by pressing the **Opt.** soft key:

Delete: deletes the message

Replay: replays the message.

Reply: allows you to send a reply to the sender.

Forward: forwards the message to another person.

Call back: allows you to call the sender.

Cut media: extracts a picture or sound, so that you can set them as wallpaper or a ringtone, or you can include them as part of a multimedia message.

Cut address: extracts phone numbers, email addresses, or URL addresses in the text, to that you can call the number, or send a message to the address, or save it in your Phonebook.

Properties: shows detailed information about the message.

Move to My folder: moves the message to My folder for later use.

Outbox *(Menu 5.2.3)*

Outbox stores messages that you have sent, are sending, have failed in transmission, or have been cancelled.

When the **Outbox** menu option is selected, the list of messages you have sent or saved displays with the:

- message's subject or or 'No subject', if the message has no subject.
- message status: for a sending message, for a sent message, for a message which was cancelled or failed in transmission, or for a delivered report. When a recipient retrieves a message that you have sent, and the **Delivery report** option (see page 117) is set to on, is changed to .

To view a message, scroll to it and press the **Select** soft key. But you cannot view the sending message.

To cancel a sending message, scroll through and select the message by pressing the Up or Down key, and then press the **Select** soft key. Then the confirming message appears. In the message, you can cancel sending it by pressing the **Yes** soft key.

To resend the message that you failed to send, scroll through and select the message by pressing the Up or Down key, and then press the **Select** soft key. Then press the **Opt.** soft key, and then select the **Send** option.

To scroll through the message, press the Up or Down key. When the message has more than one page, you can press the Left or Right key to move through the pages, or the pages cycle automatically, according to a timer set by the sender.

You can choose the following options by pressing the **Opt.** soft key:

Delete: deletes the message.

Replay: replays the message.

Send: send the message.

Properties: shows you detailed information about the message.

Move to My folder: moves the message to the My folder for later use**.**

Draft *(Menu 5.2.4)*

This message box stores messages that you save and messages whose creation was interrupted by an incoming call or message.

Note: Messages whose transmission failed are saved in Outbox.

To view a message, scroll to it and press the **Select** soft key.

You can choose the following options by pressing the **Opt.** soft key:

Send: sends the message.

Replay: replays the message.

Delete: deletes the message.

Properties: shows you detailed information about the message.

My folder *(Menu 5.2.5)*

You can move the messages stored in the Inbox or Outbox to My folder by using the **Move to My folder** option. While making a new message, you can also save to My folder by using the **Save message** option.

To view a message in My folder, scroll to it and press the **Select** soft key.

You can choose the following options by pressing the **Opt.** soft key:

Delete: deletes the message.

Replay: replays the message.

Send: sends the message.

Cut media: extracts a picture or a sound, so that you can set them as wallpaper or a ringtone, or you can send them as part of a multimedia message.

Cut address: extracts phone numbers, email addresses, or URL addresses in the text, so that you can call the number, or send a message to the email address, or save it in Phonebook.

Properties: shows you detailed information about the message.

Delete all *(Menu 5.2.6)*

This menu option allows you to delete all of the messages in each message box separately. You can also delete all of your messages at one time.

1. Scroll to a message box and place a check mark next to it by pressing the **Select** soft key.

   Selecting **All** places check marks on all of the message boxes.

2. If necessary, repeat step 1 to check other boxes.

3. When you have finished checking, press the **OK** soft key.

4. When a confirming message appears, press the **Yes** soft key to delete all of the messages in the box(es).

   Otherwise, press the **No** soft key.

Push messages *(Menu 5.3)*

This menu allows you to set to be received and read push messages.

The following options are available:

Inbox: Your phone receives push messages and saves them in the Inbox. And you can read push messages in the Inbox.

Setting: This option allows you to set the push message receiving options.

Always: always push message comes in.

Never: the push message never comes in.

Optional: Only the push messages whose setting matches to the number in this option come in. The preset number is SMS service centre. You can also edit the number.

Delete all: deletes all of the push messages.

Preset messages *(Menu 5.4)*

Using this menu, you can preset up to nine messages that you use most frequently. When you access this menu, the preset message list displays.

1. Scroll to a message or an empty entry by pressing the Up or Down key.
2. Press the **Select** soft key and enter a new message or change the old message.

   For further details about entering characters, see page 42.
3. Press the **OK** soft key to save the message.

Voice mail *(Menu 5.5)*

When you receive a voice mail, your phone displays the icon and you hear an alert.

Connect to voice mail

- In idle mode, when you receive a new voice mail, press the **Connect** soft key to access your voice mail server and follow the instructions provided.
- In idle mode, hold the **1** key down to access your voice mail server and follow the instructions provided.
- Call your voice mail server number by accessing the **Connect to voice mail** menu and follow the instructions provided.

Voice server number

Before using the voice mail service, you must store the voice mail server number obtained from your service provider.

When you select an entry in the Voice server number menu, the following options are available:

Edit number: enter a voice mail server number or press the **Phonebook** soft key to enter a number from Phonebook. Then press the **OK** soft key.

Change name: enter a server name and press the **OK** soft key to save it.

Delete: when the confirming message appears, press the **Yes** soft key. To cancel, press the **No** soft key.

Broadcast *(Menu 5.6)*

This network service allows you to receive text messages on various topics, such as the weather or traffic. Messages are displayed immediately as they are received, provided that:

- the phone is in idle mode.
- the **Receive** option (**Menu 5.6.2**) is set to **On**.
- the message channel is currently active on the channel list.

When you get broadcast messages, you can see the messages in idle mode. If the message is short, you will be able to see it on the display: otherwise, press the **View** soft key to read the entire message.

In the **Broadcast** menu option, the following options are available:

Read: lets you read received broadcast messages.

Archive: shows the list of the messages you have saved from the temporary list.

Temporary: shows the latest messages. These messages will disappear when the phone is switched off.

If the message is long, press the Up or Down key to scroll through the message.

When you read a message, press the **Options** soft key to access the following options:

Cut address: shows a list of numbers, URL/e-mail address included in the message.

Save: (Temporary only) saves this message to the Archive list.

Delete: delete this message.

Delete All: delete all message on the list.

Receive: allows you to turn the reception of broadcast messages on or off.

Channel: a check mark inside the **All** check box indicates that the channel is enabled.

To enable or disable this channel, press the **Select** soft key, then select **Enable** or **Disable**.

The **Add channel** option allows you to add a new channel to the channel list. Enter the appropriate channel code obtained from your service provider, and a title for the channel.

Language: selects your preferred language. You will receive cell broadcast messages only in the language you have selected.

Settings *(Menu 5.7)*

Short messages *(Menu 5.7.1)*

Using this menu, you can set up default SMS information. The following options are available:

Service centre: allows you to store or change the number of your SMS centre. This number is required in order to send messages. You must obtain this number from your service provider.

Validity period: allows you to set the length of time your messages are stored at the message centre while attempts are made to deliver them.

Message type: allows you to set the type of messages you want to receive, either **Text**, **Fax**, **Voice**, **ERMES**, **X400**, or **E-Mail**. The network can convert the messages into the selected format.

Reply path: allows the recipient of your SMS message to send you a reply via your message centre, if the service is provided by the network.

Delivery report: if you set this to on, the network will send you notice regarding the delivery status of messages you have sent.

Set blacklist: allows you to make a blacklist to reject the selected sender's SMS message. You can set up to 10 numbers as a blacklist.

Status: when this option is set to **On**, your phone does not receive any SMS message from the sender registered in a blacklist.

Blacklist: you can manage a blacklist. Press the **Options** soft key to add, edit, delete each blacklist entry.

Multimedia messages *(Menu 5.7.2)*

Using this menu, you can set up default settings for sending or receiving MMS messages. The following options are available:

Send settings: The following options are available:

Priority: allows you to set the priority of messages that you send. Messages can be set as Low, Normal, or High priority.

Validity period: allows you to set the length of time your messages are stored at the message centre while attempts are made to deliver them.

Delivery after: you can set the delay time before the phone sends your messages.

Address hiding: when this option is set to **On**, your phone number does not display on the recipient's phone.

Delivery report: when this option is set to **On**, the network informs you whether or not your message has been delivered.

Read reply: when this option is set to **On**, a recipient's phone sends a message to inform you of when your message was opened.

Receive settings: the following options are available:

Msg. reception: allows you to set how you receive a message. You can select between **Manual**, **Automatic** and **Reject**.

Anonymous reject: when this option is set to **On**, your phone rejects messages sent without caller ID.

Adverts reject: when this option is set to **On**, your phone rejects advertisements.

Report allowed: when this option is set to **Off**, when you receive a message, your phone will not send a reply message when you open the message, even of the sender has so requested.

MMS profiles: in this menu, you can configure MMS profile settings that are required when you send or receive multimedia messages.

Current profile: allows you to select the profile to be used with the current message.

Profile setting: allows you to set up to five profiles.

- Profile name: enter the name of the profile.
- Server URL: enter the address of the server.
- GSM setting: allows you to change the proxy settings for the GSM network.

- Gateway: enter the IP address and IP port.

- Data call type: select a network connection type between ISDN and Analogue.

- Dial number: enter the server phone number.

- Login ID: enter the server login ID.

- Password: enter the server password.

- GPRS setting: allows you to change the proxy settings for the GPRS network.

  - Gateway: enter the IP address and IP port.

  - APN: enter the access point name used for the address of the GPRS network gateway.

  - Login ID: enter the user ID required to connect to GPRS network.

  - Password: enter the password required to connect to the GPRS network.

- Bearer: select the bearer to be used for each type of network accesses.

  - GPRS only: only functions on a GPRS network.

  - GSM only: only functions on GSM network.

Memory status *(Menu 5.8)*

You can check the memory status for messages.

Short messages *(Menu 5.8.1)*

You can check how many messages are stored on the SIM card and phone's memory.

When you have finished, press the soft key or the key to exit.

Multimedia messages *(Menu 5.8.2)*

Multimedia message boxes, Camera and Media box share a given amount of memory in your phone.

The display shows the status of free and used memory.

Fun box

The **Fun box** menu contains several amusement options:

- WWW services
- Fun club
- Media box
- JAVA world

WWW services *(Menu 6.1)*

Your phone comes equipped with a WAP (Wireless Application Protocol) Browser, making it possible for you to access the Wireless Web.

Each time you start the WAP Browser, the phone connects to the Wireless Web and the service indicator icon (or) appears on the display to inform you that you are connected to the Wireless Web and will be billed accordingly. Rates vary according to your service option.

The WAP Browser ends the network connection after a certain period of inactivity and automatically reconnects as necessary. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimise your bill.

Home *(Menu 6.1.1)*

When you select this menu option, the phone connects to the network and loads the homepage of the Wireless Web service provider.

Once connected, the homepage displays. The content depends on the service provider.

Note: To quickly launch the WAP browser from idle mode, press the *i* key.

To scroll through a displayed screen, use the Up and Down keys.

To exit the browser, press the key at any time. The phone returns to idle mode.

Navigating the wap browser

To	Press the
scroll through and select browser items	Up or Down key until the item you want highlights, and then press the ✓ soft key.
select a numbered item	corresponding numeric key.
return to the previous page	↩ (or **Back**) soft key or **C** key.
return to the startup homepage	* key and select the **Home** browser option. For details, see page 121.

Entering text in the wap browser

When you are prompted to enter text, the current text input mode appears above the right soft key.

For further information on how to enter text, see page 42.

Using the WAP browser menus

There are various menu options available when surfing the Wireless Web.

To access the WAP Browser menu:

1. Press the * key or scroll to the logo on the top left of all WAP pages and then press the ✓ soft key. A list of options appears.
2. Highlight the required option using the Up or Down key.
3. Press the ✓ soft key to select the option.
4. If necessary, select the secondary option by pressing the Up or Down key and then press the ✓ soft key.

Note: Available WAP Browser operations may vary, depending on your version of the browser.

The following WAP Browser operations are available:

Back: returns to the previous page.

Home: takes you back to the homepage of the Wireless Web service provider.

Exit: exits the WAP browser.

Reload: reloads the current page.

Show URL: shows the URL address of the WAP page you are currently accessing.

About: shows browser information.

Using WAP browser options

Several options are available when you are surfing the Wireless Web. To access these options, press the *i* key once connected to the Wireless Web.

Goto URL: allows you to manually enter the URL address of the site that you wish to access.

Bookmark: allows you to use the **Bookmark** menu option. For details, see page 123.

Messages: allows you to read or write an SMS message. For details, see page 93.

Media box: allows you to use your Media box. For details, see page 127.

Answering a call during a WAP connection

You can receive an incoming call while you are using the WAP browser.

Answer the call by pressing the key or the **Accept** soft key, as you normally would. After ending the call, you can continue navigating on the WAP page you were previously accessing.

Bookmark *(Menu 6.1.2)*

This menu option allows you to store the URL addresses of up to 15 of your favourite Web sites.

To store a URL address:

1. Select an empty location and press the **Select** soft key.
2. Enter the address and press the **OK** soft key to save it.
3. Assign a name to the bookmark and press the **OK** soft key.

   For further information about how to enter text, see page 42.

Once you have stored an address, the following options are available when you select it.

Go: allows you to access the site directly.

Edit: allows you to change the name and URL address of the bookmark.

Delete: allows you to delete the bookmark.

Go to URL *(Menu 6.1.3)*

This menu option allows you to manually enter the URL address of the Web site that you wish to access.

Enter the URL address and press the **OK** soft key.

For further information about how to enter text, see page 42.

Clear cache *(Menu 6.1.4)*

This menu option allows you to clear the information stored in the cache. The cache is the phone's temporary memory, used to store the most recently accessed WAP pages.

Proxy settings *(Menu 6.1.5)*

This menu option allows you to set up five proxy servers.

Note: You do not need to change the browser settings in most cases. Change the settings only when your network provider asks you to.

For each proxy, the following options are available:

Proxy name: enter the name of the HTTP proxy server.

GSM setting: you can change the proxy settings for the GSM network.

Gateway: enter the IP Address and IP Port

Data call type: select a network connection type: **ISDN** or **Analogue**.

Dial number: enter the PPP server phone number.

Login ID: enter the PPP server login ID.

Password: enter the PPP server password.

GPRS setting: you can change the proxy settings for the GPRS network.

Gateway: enter the IP Address and IP Port.

APN: enter the access point name used for the address of the GPRS network gateway.

Login ID: enter the user ID required to connect to the GPRS network.

Password: enter the password required to connect to the GPRS network.

Home URL: you can change the address of your startup homepage.

When the default homepage displays, you can delete it using the **C** key and enter your own choice. To enter any special characters, / for example, use the Symbolic mode; see page 54.

Bearer: you can select the bearer to be used for each type of network access.

GPRS first: your phone will search for the GPRS network first. If this service is not available, you can use a GSM service temporarily.

GPRS only: the phone only works in GPRS networks.

GSM only: the phone only works in GSM networks.

Current proxy *(Menu 6.1.6)*

This menu option allows you to activate one of the proxies you set up to use the WAP connection.

Fun club *(Menu 6.2)*

You can access Samsung Fun Club on the Internet and download various media items, such as melodies and images.

Samsung Fun Club is the preset web site providing Samsung phone users with attractive download services. You can download:

- images and ring tones via SMS.
- 4-level grayscale and colour images from WAP.
- 64 polyphonic melodies from WAP.
- information and electronic catalogues for Samsung Electronics products.

SFC home *(Menu 6.2.1)*

In this menu, you can access the Samsung Fun Club homepage.

Note: Before accessing Samsung Fun Club for the first time, please connect your service provider's WAP homepage first. Then reconnects to Samsung Fun Club. This service requires WAP subscription and is unavailable depending on your local system and services.

Service area *(Menu 6.2.2)*

Each time you move to HongKong or China, you need to change this setting to use the SFC service, according to the area where you are. You can choose either **China** or **China HK**.

For further details about this service, contact your service provider.

Media box *(Menu 6.3)*

This menu option stores various media items from outside sources, such as WAP sites, or multimedia messages you have received.

Photos *(Menu 6.3.1)*

This option allows you to view the taken pictures.

My photos: allow you to view the photos in my photos.

My album 1 / My album 2: allow you to view the photos in the selected album.

When you view a photo, press the **Options** soft key to do the followings.

Send: allows you to send it via a message.

Rename: allows you to rename it.

Delete: allows you to delete it.

Move to album: allows you to move it to one of the albums.

Set as: allows you to set it as a wallpaper or a caller ID.

Wallpaper: allows you to set it as a wallpaper.

Caller ID: allows you to set it as a caller ID.

Protection: allows you to protect it from deletion or not.

Properties: allows you to view the detail information of the photo.

Images *(Menu 6.3.2)*

This option allows you to view images extracted from EMS or MMS messages, downloaded from WAP sites, or from EasyStudio PC software.

To view the image, press the View soft key.

When you view a photo, press the **Opt.** soft key to do the following:

Send: allows you to send the image as a multimedia message.

Rename: allows you to rename it.

Delete: allows you to delete it.

Set as: allows you to set it as wallpaper, power on imag, or power off image.

Properties: allows you to view the detailed information about the image.

Sounds *(Menu 6.3.3)*

This option allows you to listen to recorded voices and melodies received from outside sources, such as WAP sites, the EasyStudio PC software, or multimedia messages you have received.

Voices: allow you to listen to the voice recordings.

My sounds: allow you to listen to various melodies.

When you select a sound, press the **Options** soft key to send, rename, delete, set as a ringtone (only in My sounds) or view its properties.

For further details about these options, see the options of the **Photos** menu (see page 127).

Delete all *(Menu 6.3.4)*

This option deletes all photos, images, and sounds from the Media box.

Photos

1. Scroll to a box and place a check mark ahead it by pressing the **Select** soft key.

   Selecting **All** places check marks on all of the items. If you want to delete the protected photos and the caller ID photos, select the **With protected photos** option and the **With caller ID photos** option.

2. If necessary, repeat step 1 to check another box.

3. When you have finished checking, press the **OK** soft key.

4. When a confirming message appears, press the **Yes** soft key to delete all of the photos in the box(es).

   Otherwise, press the **No** soft key.

Images

When a confirming message appears, press the **Yes** soft key to delete all images.

Otherwise, press the **No** soft key.

Sounds

1. Scroll to a sound box and place a check mark next to it by pressing the **Select** soft key.

   Selecting **All** places check marks in all of the boxes.

2. If necessary, repeat step 1 to check other boxes.

3. When you have finished checking, press the **OK** soft key.

4. When a confirming message appears, press the **Yes** soft key to delete all of the sounds in the box(es).

   Otherwise, press the **No** soft key.

Group delete *(Menu 6.3.5)*

You can delete media files stored in the Media box selectively.

1. Select the Photos, Images, or Sounds by pressing the **Select** soft key.

2. Scroll to a media file and place a check mark next to it by pressing the **Select** soft key.

   If you want to check what you select, press the key.

   Selecting **All** places check marks on all of the media files.

3. If necessary, repeat step 1 to check another box.

4. When you have finished checking, press the **OK** soft key.

5. When a confirming message appears, press the **Yes** soft key to delete all of the media files in the box(es).

   Otherwise, press the **No** soft key.

Memory status *(Menu 6.3.6)*

Media box, Camera and multimedia message boxes share a given amount of memory in your phone.

This display shows the status of free and used memory.

JAVA world *(Menu 6.4)*

You can download MIDlets (Java applications that run on mobile phones) from various sources using the WAP Browser and store them on your phone.

Downloads *(Menu 6.4.1)*

A list of Java games is displayed. Two MIDlets (Java games) have been pre-loaded on your phone. If the Jave games list is empty, a pop-up message is displayed inviting you to download a new game. To add MIDlets to the list, download them from the Web.

To	**Press the**
find a game	Up or Down key.
run a game	**Launch** soft key**.**
view detail information	**Info** soft key.
delete the game	**Delete** soft key in the information display.

SnowBallFight

The goal of this game is to challenge and defeat the snowball fight champions of four different teams.

Accessing a game

After loading the game, press any key twice to go to the first menu screen. At the first menu screen, press the # key to play the game, or press the * key to access game's main menu.

Play: allows you to start a new game or a saved game. The saved game option allows you to continue playing from where you left off the last time you played the game.

Instructions: shows you the explanation of control keys and offense and defense items.

Configuration: allows you to turn the sound or vibration on or off, and to select the speed of game from 1 to 5.

Quit: quits the game and returns to the downloads menu screen.

Playing a game

Move the character along the street using the navigation key. If you have enough coins, earned while fighting, you can buy defensive items at the drug store, and offensive items at the item shop. Move the character to the currently fighting team and press the # key to join in. When the snowball fight starts, hit the rival kids with snowballs and avoid theirs. While fighting, you can make use of any items you have. If you raise enough mana, you can also use special attack. You must win all fights in four stages in order to challenge the champions.

Key Commands

4/6 or Left/Right: move left or right

2,5 or Up, *i* :control the distance at the first press and throw the snowball at the next press.

8 or Down: a the special attack depending on your mana.

3: enters item mode in order to use the items in your inventory. Select the item you want to use by pressing 2, 5, Up or *i* key.

Special attacks

Level 1: Aurora, all enemies are hit by snowballs.

Level 2: Ice dragon, all enemies are hit by snowballs and frozen for 8 seconds.

Level 3: Icicle storm, double powered snowball attack on all enemies. Enemies' attack accuracy is decreased for 10 seconds.

BubbleSmile

BubbleSmile is an arcade puzzle game.

Accessing a game

After loading the game, you will see the following options. Press *i* key to select one of them:

Start game: allows you to start a new game in timed mode or skilled mode.

- Timed mode: You have until time runs out to play. You must align bubbles of the same colour to make them disappear, and when you do, Your time increases.

- Skilled mode: you have to make more than 4 bubbles disappear at once for skill bar gauge to increase. If less than 4 bubbles disappear, then the gauge falls.

Continue: allows you to continue the last game you played. The menu is only available when a game has already been played.

High score: shows you the high score table.

How to play: shows you the instruction of this game.

Option: allows you to set the sound on or off

Playing a game

Your score goes up when you make bubbles disappear. You must align at least 3 bubbles horizontally or diagonally to make them vanish, You will see a band surrounding three bubbles, and you can rotate the bubbles within the band to make them line up within the matrix, to match colours. You can also move the band to surround three different bubbles. When the game ends, if your score was within the to three, it will appear on the display.

Key Commands

2, 4, 6, 8, or navigation key: move the band up, down, left, or right

1: rotate the bubbles in the band counterclockwise

3: rotate the bubbles in the band clockwise

Internet settings *(Menu 6.4.2)*

This menu option allows you to set the information to connect the Java server. This information is provided by the network operator automatically, but you can change it manually.

APN: enter the access point name used for the address of the GPRS network gateway.

Login ID: enter the user ID required to connect to the GPRS network.

Password: enter the password required to connect to the GPRS network.

DNS settings: enter the DNS address. The DNS (Domain Name Server) address to connect the Java server is automatically set when making data call set up.

Memory status *(Menu 6.4.3)*

You can check memory space available for Java downloads. The display also shows the used memory.

Organiser

The Organiser feature enables you to:

- view the calendar and/or write a memo or make a to do list.
- set the current date and time, and find out what time it is in various cities around the world.
- set the alarm so that the phone rings at a specific time.
- use your phone as a calculator, unit convertor, timer, or stopwatch.

New memo *(Menu 7.1)*

This menu option allows you to create a new memo.

Note: You can also access this menu by holding down the **C** key in idle mode.

1. Write a memo of up to 100 characters, and press the **OK** soft key.

   For further information about how to enter text, see page 42.

2. Select the category to which you want to save the memo and press the **Select** soft key.

   The following categories are available:

   - **Scheduler**: normally scheduled events, such as appointments or meetings.
   - **To do list**: tasks you need to do.
   - **Call**: calls you need to make.

- **Anniversary**: anniversaries to be remembered, such as wedding anniversaries, birthdays, or other special days.

Note: You can save up to 25 items in each category, giving you a total capacity of 100 memos.

3. Scroll to a date on the calendar by pressing the navigation keys. Press the **Select** soft key.

4. If applicable, depending on the category that you have selected, enter the event time, and press the **OK** soft key.

5. If you have selected the 12-hour time format (see page 144), select **AM** or **PM** by pressing the Up or Down key, and then press the **Select** soft key.

6. To set an alarm for the memo, press the **Yes** soft key.

   Otherwise, press the **No** soft key. The memo is saved immediately. Go to step 10.

7. Enter the time for the alarm to sound, and press the **OK** soft key.

8. If you have selected the 12-hour time format (see page 144), select **AM** or **PM** by pressing the Up or Down key, and then press the **Select** soft key.

9. Select an alarm melody and press the **Select** soft key.

   The memo is saved and then displays on the screen.

10. After you have finished creating your memo, you can choose from the following options by pressing the **Options** soft key:
    - **Add**: allows you to create a new memo.
    - **Delete**: allows you to delete the memo.
    - **Edit**: allows you to edit the memo.
    - **Move**: allows you to move the memo to a different date.
    - **Copy**: allows you to copy the memo to a different date.
11. When you have finished, press the soft key or the key to exit.

Calendar *(Menu 7.2)*

The calendar helps you to keep track of your schedule, calls that you need to make, tasks that you need to do, and anniversaries. You can set an alarm to sound on the date of a scheduled item.

Consulting the calendar

To	Press the
move to another day	Left or Right key.
move to another week	Up or Down key.
move to the previous or next month	Up or Down key and hold it down
move to the previous or next year	Left or Right key and hold it down.

The following options are available when you press the **Options** soft key on the Calendar display:

Add memo: allows you to create a new memo.

Go to date: allows you to enter a particular date and then schedule an event on that date.

View all: shows all of the events that you have scheduled.

Delete day: deletes the events scheduled on the selected day.

Delete all: deletes all of the events that you have scheduled.

Creating a new memo

1. Scroll to a date on the calendar, referring to page 138, and press the **Select** soft key.
2. Write your memo and press the **OK** soft key.

   For further information about how to enter characters, see page 42.
3. Select the category to which you want to save the memo, and press the **Select** soft key.

   The following categories are available:

   - **Scheduler**: normally scheduled events, such as appointments or meetings.
   - **To do list**: tasks you need to do.
   - **Call**: calls you need to make.
   - **Anniversary**: anniversaries to be remembered, such as wedding anniversaries, birthdays, or other special days.
4. Follow the procedure from step 4 on page 137 onwards to save the memo.

Viewing your calendar memos

A date that has a memo associated with it is highlighted in a red box. If you select a date on which events have already been scheduled, the number of memos of each type is shown at the bottom of the calendar.

- : General schedule events
- : To do list
- : Calls
- : Anniversaries

Press the **Select** soft key to view the memos.

If you have created more than one memo on the same day, you can scroll to the event you want to view by pressing the Left or Right key.

The following options are available when you press the **Options** soft key:

Add: allows you to add a new memo. For further information about how to add a memo, see page 136.

Delete: allows you to delete the memo.

Edit: allows you to edit the memo.

Move: allows you to move the memo to a different date.

Copy: allows you to copy the memo to a different date.

To do list *(Menu 7.3)*

This menu allows you to view your list of tasks.

To create a new memo of the To do list type:

1. Write the memo about your task and press the **OK** soft key.

   For more information about how to enter characters, see page 42.

2. Scroll to a date on the calendar, referring to page 138, and press the **Select** soft key.

3. Follow step 4 on page 137 onwards to save the memo.

Once you have defined a task, it is listed with a status mark (for Done or for Undo) on the **To do list** menu.

To scroll to a specific task, press the Up or Down key, and press the **Select** soft key. The task displays with the deadline, alarm setting, job details, and status mark.

You can scroll to the previous or next task by pressing the Left or Right key.

The following options are available when you press the **Options** soft key:

Add: allows you to add a new task. For details about adding To do list-type memos, see page 136.

Mark: allows you to change the status mark.

Edit: allows you to edit the contents of the task.

Move: allows you to move the task to a different date.

Copy: allows you to copy the task to a different date.

Delete: allows you to delete the task.

Delete all: allows you to delete all of tasks from the list.

Clock *(Menu 7.4)*

This option allows you to change the time and date displayed. You can also check the current time for Greenwich Mean Time (GMT) and 22 major cities around the world.

The following options are available:

Set time: allows you to enter the current time. You can choose the time format in the **Set format** menu option; see page 144.

Note: Before setting the time, you must specify your time zone in the **Set world time** menu option.

Set date: allows you to enter the day, month, and year. You can change the date format in the **Set format** menu option; see page 144.

Set world time: allows you to check current GMT, as well as the current time in 22 major cities around the world. Scroll through the cities using the Left or Right key.

The screen shows the:

- city name.
- current date and time.
- time difference between the selected city and your city if you have set the local time (see below) or GMT (by default).

To select your time zone:

1. Select the city corresponding to your time zone by pressing the Left or Right key one or more times.

   The local date and time display.

2. Press the **Set** soft key.

3.

To	Select
update the current date/time with this new setting	**Set local**.
indicate that the time zone is currently using the daylight saving time	**Set DST.** The icon is shown next to the time difference.
indicate that the time zone is no longer using the daylight saving time	**Remove DST** (only available when the icon is shown next to the time difference).

4. When you have finished, press the soft key or the key to exit.

Set format: allows you to change the time and date formats.

Time format: 24 hours
12 hours

Date format: DD/MM/YYYY (day/month/year)
YYYY/MM/DD (year/month/day)

Alarm *(Menu 7.5)*

This option allows you to set an alarm to sound at a specific time. You can set up to three alarms or set the phone to sound an alarm when it is switched off.

To set an alarm:

1. Select either **Morning call**, **Alarm1**, or **Alarm2** by pressing the Up or Down key.

   The icon means that no alarm is currently set. The icon means that an alarm has already been set.

2. Press the **Select** soft key.

3. Press the **Options** soft key.

4. Scroll to an option by pressing the Up or Down key and press the **Select** soft key. Change the setting, as needed.

   - **Alarm day**: place or remove a check mark on the day(s) of the week by pressing the **Select** soft key. If you want to set a daily alarm, select **Everyday**. If you want to set a temporary alarm, select **One-time alarm**. When you press the **OK** soft key after selecting, your phone asks you to enter the alarm time.

- **Alarm time**: enter the time for the alarm to sound.
- **Alarm tone**: select an alarm melody.
- **Remove alarm**: deactivates the alarm.

Note: Alarms 1 and 2 will alert you with the alarm tone you set, or with vibration, depending upon the incoming call alert type (**Menu 4.1.4**). Morning call, however, will alert you with the melody you set, regardless of the incoming call setting.

5. Repeat step 4 to change each setting.

6. When you have finished, press the soft key or the key to exit.

Once an alarm has been set, you will see the Alarm icon ( ) on the top line of the display. To turn off the alarm when it sounds, open and close the phone, or press any key.

Note: When quiet mode has been activated, Alarms 1 and 2 will not sound. However, Morning call will sound regardless of whether or not quiet mode has been activated.

To set the alarm to ring even if your phone is switched off:

1. Scroll to **Auto power** on the Alarm list and press the **Select** soft key.

2. If necessary, press the Up or Down key to select **On**.

   To turn the Auto Power feature off, select **Off**.

3. Press the **Select** soft key to save the setting.

4. When you have finished, press the soft key or the key to exit.

Once you have activated the auto power alarm, a check mark appears next to **Auto power**. If the phone is off at the specified alarm time, it automatically switches on and sounds the alarm. It then automatically switches off again.

To turn off an alarm:

- Press the **Confirm** soft key.
- When the morning call's alarm tone sounds, press any key or the **Snooze** soft key to stop the alarm for five minutes, after which it will resume. You can do this a maximum of five times.

The snooze alarm tone sounds while the phone is switched off and the **Auto power** is set to on, and the quiet mode is activated. If you reset the morning call's alarm time or deactivate the morning call's alarm, the snooze alarm is cancelled.

Calculator *(Menu 7.6)*

You can use the phone as a calculator. The calculator performs basic arithmetic functions, such as addition, subtraction, multiplication, division and remainder computation.

To perform a calculation:

1. Enter the first number using the number keys.

   Note: To erase any mistakes or clear the display, press the **C** key.

2. Press the * key to enter a decimal point (**.**) or the # key as often as necessary to select the appropriate operation: **+** (add), **-** (subtract), * (multiply), **/** (divide), **%** (remainder), **(**, or **)**.

3. Enter the second figure.
4. Repeat steps 2 and 3, if necessary.
5. Press the **Equal** soft key to view the result.

   The result appears in the **Answer** box.

   Note: The result is rounded off to six decimal places.
6. When you have finished, press the soft key or the key to exit.

Conversion *(Menu 7.7)*

This menu option allows you to convert one type of measurement to another.

To convert a value:

1. Scroll to the type of conversion to be performed: **Length**, **Weight**, **Volume**, **Area,** and **Temperature**. Press the **Select** soft key.
2. Enter the value to be converted and press the Down key to enter it into the **From** field.

   You can enter a decimal point (.) using the * key. And you can enter a minus (-) using the # key in **Temperature**.
3. Select the original unit of measurement by pressing the Left or Right key. Then press the Down key to move to the **To** field.

   Refer to the table on the following page for the units available.

4. Select the unit of measurement to which you want the value converted by pressing the Left or Right key.

5. Press the **OK** soft key or the key to view the result.

   The result appears in the **Answer** box.

6. When you have finished, press the soft key or the key to exit.

Units available

Type	Units
Length	mm cm m km in ft yard mile
Weight	g kg ton grain oz pound
Volume	cm^3 m^3 l in^3 ft^3 yd^3 gal
Area	cm^2 m^2 a in^2 ft^2 yd^2 acre
Temperature	°C °F

Timer *(Menu 7.8)*

Using the Timer feature, you can set the phone to sound an alarm after a specified period of time has elapsed.

1. Press the **Set** soft key.

2. Enter the length of time you want to count down hours:minutes and press the **OK** soft key.

3. Press the **Start** soft key to start counting down.

Even if you exit the Timer screen, the timer will continue running. After the specified time has expired, the phone informs you by playing a melody and displaying a text notification.

To stop the timer melody when it sounds, open and close the phone or press any key.

To stop the timer before the set time has expired, press the **Stop** soft key on the Timer screen. The phone will retain the timer setting at the time you stopped it. If you want to clear the setting, press the **Set** soft key. The timer will display 00:00. Press the **OK** soft key.

Notes:
- The timer uses power from the battery; consequently, the phone's operating time will be reduced
- When the quiet mode is activated, there is no sound.

Stopwatch *(Menu 7.9)*

The stopwatch can be used to measure times for various sports.

Example: Running or swimming races

Up to four stopwatches can be used.

The precision of the stopwatch is one hundredth of a second. The maximum measurement time is 10 hours.

1. To start the stopwatches, press the **OK** soft key.
2. When you wish to stop the first stopwatch, press the **OK** soft key. Repeat this step for the other stopwatches.
3. Press the **Reset** soft key to reset the watches.
4. Press the **C** or key to exit.

Dictionary *(Menu 7.10)*

You can use this phone as an English-Chinese or Chinese-English dictionary. Each dictionary contains 50,000 words and supports both simplified and traditional Chinese characters.

Using English-Chinese dictionary

1. Enter the word or the initial letter(s) of the word you want to look up.

   A list will appear with either your word, or the word most closely matching your input alphabetically, highlighted.
2. If necessary, press the Up or Down key to scroll to the word you want.
3. Once you have found the word, press the **OK** soft key.
4. The corresponding Chinese word(s) will be displayed.

Using Chinese-English dictionary

1. Press the right soft key twice to move to the input language selection menu.
2. This phone supports Chinese input modes such as a **Pinyin**, **CHN S Stroke** and **CHN T Stroke**. Select the one that you want and enter the word that you want to look up.
3. Once you have completed entering the word, press the **OK** soft key.
4. The corresponding English word(s) will be displayed.

Note: When you enter the letter, you can use the touch pad with stylus pen. For more information about this, see page 11.

Camera

Using the camera module embedded in your phone, you can take pictures for people or events while on the move. Additionally, you can send photos to other people in a picture message or as an e-mail attachment. The camera produces JPEG pictures.

CAUTIONS:

- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

Take photos *(Menu 8.1)*

This menu allows you to take a picture to send the photo as a picture message to other destinations. You can use the picture as a background and store it separately in My album folder.

Taking a picture with the folder open

1. To access this menu, press the **Select** soft key when **Take photos** highlights. Or, press the Up key in idle mode.

   To take pictures immediately in idle mode, press and hold the Up key or the Camera ( ) key on the right side of the phone.

   The image to be captured appears on the display.

The icons on the top line of the display indicate the size, quality, flash type and current mode (shown if you select the multi-shot mode or night mode).

2. Adjust the image by aiming the camera to the subject.

To	Press the
adjust the brightness of the picture	Left or Right key.
zoom in or out the picture	Up or Down key.
flip the picture up and down	volume up key
reverse the picture like a mirror image	volume down key
turn the viewfinder's frame on or off	**1** key
change the picture size	**2** key
change the picture quality	**3** key
select the mode	**4** key
select the effect	**5** key
turn the anti-banding noise on or off	**6** key
select the frame	**7** key
select the delay time	**8** key
go to the **My photos** menu	**9** key
switch the camera flash on or off (if you set the **Manual** option in the **Flash light** menu. See page 156, 161)	**0** key

For more information about these functions, see "Using the camera options" on page 155.

3. Press the soft key or the Camera ( ) key on the right side of the phone to take a picture.

   The picture is automatically saved in the **My photos** (see page 158).

4.

To	Press the
use the options	**Options** soft key. For details about the options, see below.
delete the picture file	**Delete** soft key.
return to the capture mode to take another picture.	**C** key.
turn the camera off and return to idle mode	key.

When you press the **Options** soft key after taking a picture, the following options are available. Scroll the option you want by pressing the Up and Down keys and press the **Select** soft key:

Send: allows you to send a multimedia message using the taken picture. For further details about sending multimedia messages, see page 100.

Rename: allows you to rename the taken picture.

Go to my photos: allows you to see the taken pictures in the **My photos** (see page 158).

Set as: allows you to set it as a wallpaper or a caller ID.

Wallpaper: allows you to set it as a wallpaper.

Caller ID: allows you to set it as a caller ID.

Protection: allows you to protect the taken picture from deletion or not.

Properties: this option shows you information about the picture, such as name, size, date, resolution, protection type and format.

Using the camera options

When you press the soft key in the capture mode, the following options are available for the current shot:

Mode: You can take a picture in various modes. Once you change the mode, its indicator appears at the top left on the display.

Normal shot: you can take a picture in the normal mode.

Multi-shot: you can take action stills. Select speed and the number of pictures you want to take. When you press the soft key or the Camera ( ) key on the right side of the phone, the phone automatically takes and saves the pictures successively as many times as you set. The Mobile (128*120) size will be set by default.

Night mode: this option allows you to take a picture of the best quality when it is dark.

Capture only: you can take pictures without review.

Frame: this option allows you to use a frame on the picture. Press the navigation key to find the frame format you want to use. You can preview the image with the frame format by using the **Preview** soft key. The Mobile (128*120) size will be set by default.

Note: The zoom control bar and the brigthness control bar do not display when you use the frame.

Effects: this option allows you to apply special effects to the picture. Press the Up or Down key to find the tone you want to use. **Gray**, **Negative**, **Sepia**, **Emboss** and **Sketch** are available. To deactivate the effect setting, select **Off**.

Rotation: this option allows you to flip the image vertically or reverse it as a mirror image.

Timer: you can select the delay time. When you press the capture key, the phone takes the picture after the specified time. When you exit the camera mode or select **Off** in the **Timer** menu, the timer is off.

Settings: this option allows you to change the settings for taking a picture. And this option is synchronized with the **Settings** menu. See page 160.

Photo size: sets the image size to one of **VGA (640*480)**, **QVGA (320*240)**, **QQVGA (160*120)** and **Mobile (128*120)**. The selected image size displays on the capture screen.

Photo quality: allows you to select the image quality from **Super fine**, **Fine**, **Normal**, and **Economy**. The option you select appears on the top of the display.

Shutter sound: allows you to select a sound when you press the shutter, the soft key or the Camera ( ) key on the right side of the phone.

Note: This sound setting is not applied to the multi-shot sound.

Flash light: allows you to set the camera flash to use automatically or not.

- Manual: to switch the camera flash on or off, you have to press the **0** key in the capture mode.

- Automatic: when you press the shutter, the soft key or the Camera ( ) key on the right side of the phone, the phone lights a flash. After a while the camera takes a picture and the flash go out.

Default name: allows you to change the default prefix name of the picture.

Help: this option shows you the functions of the navigation keys and the volume keys in the capture mode.

Taking a picture with the folder closed

1. Close the folder.
2. To turn the camera on, press and hold the Camera ( ) key on the right side of the phone.

   The image to be captured appears on the display. The volume keys zoom in or out the image.
3. Press the Camera ( ) key on the right side of the phone to take the picture.

   The picture is automatically saved in the **My photos** menu.
4. To review the picture, open the folder. You can delete the picture by pressing the **Options** soft key and select the **Delete**. To return to the camera mode, pressing the **Preview** soft key.

   To exit the camera mode, open the folder and press the key.

My photos *(Menu 8.2)*

In this menu, you can review the pictures you have taken.

To	Press the
scroll through the pictures	navigation keys.
show the selected picture as an enlargement	**View** soft key.
go back to the multiple view mode	**Multi** soft key.
use the options	**Options** soft key. For details, see page 154.
turn the camera off and return to idle mode	key.

My albums *(Menu 8.3)*

My Album allows you to store the pictures as your photo album. Select one of albums. It shows the pictures saved in the album. For details about viewing your pictures and using them, see page 158.

Delete all *(Menu 8.4)*

You can delete all the photos saved in each category.

1. Scroll to a photo box and place a check mark ahead it by pressing the **Select** soft key.

   Selecting **All** places check marks on all of the photo boxes. If you want to delete the protected photos and the caller ID photos, select the **With protected photos** option and the **With caller ID photos** option.

2. If necessary, repeat step 1 to check another box.

3. When you have finished checking, press the **OK** soft key.

4. When a confirming message appears, press the **Yes** soft key to delete all of the photos in the box(es).

   Otherwise, press the **No** soft key.

Group delete *(Menu 8.5)*

You can delete photos stored in My photos and My albums selectively.

1. Select the My photos, My album1, or My album2 by pressing the **Select** soft key.

2. Scroll to a message and place a check mark next to it by pressing the **Select** soft key.

If you want to check what you select, press the key.

Selecting **All** places check marks on all of the photos.

3. If necessary, repeat step 1 to check another box.

4. When you have finished checking, press the **OK** soft key.

5. When a confirming message appears, press the **Yes** soft key to delete all of the photos in the box(es).

   Otherwise, press the **No** soft key.

Settings *(Menu 8.6)*

This menu option allows you to change the default settings of the options for using the camera feature.

The following options are available:

Photo size: sets the image size to one of **VGA (640*480)**, **QVGA (320*240)**, **QQVGA (160*120)** and **Mobile (128*120)**. The selected image size displays on the capture screen.

Photo quality: allows you to select the image quality from **Super fine**, **Fine**, **Normal**, and **Economy**. The option you select appears on the top of the display.

Shutter sound: allows you to select a sound when you press the shutter, the soft key or the Camera ( ) key on the right side of the phone.

Note: This sound setting is not applied to the Multi-shot sound.

Flash light: allows you to set the camera flash to use automatically or not.

Manual: to switch the camera flash on or off, you have to press the **0** key in the capture mode.

Automatic: when you press the shutter, the soft key or the Camera ( ) key on the right side of the phone, the phone lights a flash. After a while the camera takes a picture and the flash go out.

Default name: allows you to change the default prefix name of the picture.

Memory status *(Menu 8.7)*

Camera, Media box and multimedia message boxes share a given amount of memory in your phone.

The display shows the status of free and used memory.

Phone settings

Many different features of your phone can be customised to suit your preferences via the **Phone settings** menu.

Display *(Menu 9.1)*

You can change the background image and the colour of the display components, according to your preferences and needs.

Wallpaper *(Menu 9.1.1)*

This option allows you to change the background image displayed in idle mode.

The following options are available:

Animations: allows you to select an animated scene.

Photos: allows you to select one of the photos taken by the camera.

Images: allows you to select one of images in the **Images** box in the **Media box** menu which have been downloaded from WAP sites, EasyStudio PC software, or received multimedia messages.

Text position: allows you to select the position of the text displayed on the idle screen, such as the operator's name, current date and time, and text notifications of missed calls or new messages. Choose either **Top** or **Bottom**. If you set this option to **Off**, your phone displays only the wallpaper image.

Text style: allows you to set the style of the text displayed on the idle screen.

Note: When you set the wallpaper image to **Calendar**, the Text position and Text style options are not applied.

Front LCD *(Menu 9.1.2)*

You can select a different clock displaying type on the Front LCD.

Skin *(Menu 9.1.3)*

You can change the colour setting of the display components, such as soft key indications areas, or menu names, and icons.

Backlight *(Menu 9.1.4)*

You can specify how long the backlight stays on. Select how long the backlight remains on after the last key has been pressed or the folder left open.

LCD brightness *(Menu 9.1.5)*

This option allows you to adjust the brightness of the display screens.

1. Adjust the contrast by using the Up and Down keys or the volume keys on the left side of the phone.

2. When you are satisfied, press the **OK** soft key to save the selection.

Service light *(Menu 9.1.6)*

You can turn off the service display or change the colour of the service light.

Greeting message *(Menu 9.2)*

This menu option allows you to set a greeting message to be displayed briefly when the phone is switched on.

When you access this menu, the current message displays.

To	Press the
clear the existing message	**C** key and hold it down.
enter a new message	appropriate alphanumeric keys.
save your input	**OK** soft key.
cancel your input and return to idle mode	key.

For further information on how to enter text, see page 42.

Language *(Menu 9.3)*

You can select a different language for the display text. **English**, **Chinese S** (Simplified Chinese), **Chinese T** (Traditional Chinese) are available.

Security *(Menu 9.4)*

The security settings enable you to restrict the use of your phone to the people and types of calls of your choice.

Various codes and passwords are used to protect the features of your phone. For more information, see page 176 -178.

PIN check *(Menu 9.4.1)*

When the PIN Check feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before disabling the PIN Check feature, you must enter your PIN.

The following options are available:

Disable: the phone connects directly to the network when you switch it on.

Enable: you must enter the PIN each time the phone is switched on.

To change your PIN, see the **Change PIN** menu option below.

Change PIN *(Menu 9.4.2)*

This feature allows you to change your current PIN to a new one, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Phone lock *(Menu 9.4.3)*

When the Phone lock feature is enabled, the phone is locked and you must enter the 8-digit phone password each time the phone is switched on.

The password is preset to “00000000” at the factory. To change the phone password, see the **Change password** menu option below.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

Disable: you are not asked to enter the phone password when you switch the phone on.

Enable: you are required to enter the phone password when you switch the phone on.

Change password *(Menu 9.4.4)*

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to “00000000” at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

Privacy *(Menu 9.4.5)*

This feature allows you to lock or unlock the usage of the contents, such as multimedia messages, photos, images, and sounds.

To enable or disable the Privacy feature, you must enter your phone password.

SIM lock *(Menu 9.4.6)*

To enable the SIM lock feature, you must enter a new four- to eight-digit SIM lock code, and confirm it by entering it again.

The following options are available:

Disable: you can use any other SIM cards with your phone.

Enable: you must enter the SIM lock code to use another SIM card with your phone.

To unlock the SIM, enter the SIM lock code.

FDN mode *(Menu 9.4.7)*

The FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

Disable: you can phone any number.

Enable: you can only call phone numbers stored in Phonebook. You must enter your PIN2.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

To change your PIN2, see the **Change PIN2** menu option below.

Change PIN2 *(Menu 9.4.8)*

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

Auto redial *(Menu 9.5)*

With the Auto redial function, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between two call attempts varies.

The following options are available:

Off: the number is not redialled.

On: the number is redialled automatically.

Voiceclarity *(Menu 9.6)*

Voiceclarity feature makes received sound louder and clearer during a call. It is useful when you are in a noisy place.

For further details about the Voiceclartity feature, see .

Active folder *(Menu 9.7)*

This menu allows you to set whether you can answer an incoming phone call by opening the folder, or not.

The following options are available:

Off: you should press a key, depending on the setting of the **Anykey answer** option, to answer a call.

On: you can answer a call by opening the folder.

Anykey answer *(Menu 9.8)*

You can answer incoming calls by pressing almost any key on the phone.

Off: you can only press or the **Accept** soft key to answer incoming calls.

On: you can press any key, except and the **Reject** soft key to answer incoming calls.

Side key *(Menu 9.9)*

This menu option allows you to change the function of the volume keys on the left side of the phone when you receive an incoming call.

The following options are available:

Reject: the incoming call is rejected when you hold down one of the volume keys.

Silence: the ring tone is silenced when you hold down one of the volume keys; the call is not rejected.

Infrared activation *(Menu 9.10)*

This feature allows you to send or receive data through the infrared port.

In this menu, you can activate or deactivate the infrared port.

The following options are available:

Off: deactivates infrared feature on the phone.

On: activates the infrared feature on the phone.

The IrDA icon ( ) appears on the top line of the display.

If there is no communication between your phone and the IrDA-compliant device within 1 minute of activating the feature, it is automatically deactivated.

Reset settings *(Menu 9.11)*

This menu option allows you to reset your phone to its default configuration. You can reset the sound settings, phone settings, or all of the settings together.

1. Select one of the settings to reset by pressing the **Select** soft key.

2. When a confirming message appears, press the **Yes** soft key to reset settings. Then enter the phone password and press the **OK** soft key.

   The password is preset to “00000000” by default. To change it, see page 166.

   Otherwise, press the **No** soft key.

Using ALS (Alternate Line Service)

The ALS feature enables two lines to be associated with one SIM card. Consequently, you can make and receive calls on either line. If you subscribe to this network service, a few additional menu options enable you to set up this feature.

Note: Please contact your service provider to check the availability of this feature and how to subscribe to ALS.

Selecting a line

You can select a line for each call via the **Active line** menu option. For further details, refer to page 86.

Editing the line name

You can enter a name for each line via the **Own number** menu option.

When you edit the name of a line, this name replaces “Line 1” or “Line 2”. For further details, refer to page 72.

Setting the ring type

To distinguish between incoming calls on the two lines, you can select a different ring tone for each line via the **Incoming calls** menu option. For further details, see page 87.

Setting call diverting options

You can set up call diverting via the **Call diverting** menu option. This service reroutes incoming calls on the line of your choice to a specified number. For further details, see page 80.

Viewing call information

You can view call times and last call cost information for each line. For further details, see page 77.

Solving problems

Before calling for service, perform the following simple checks for the problems listed. You may save the time and expense of an unnecessary service call.

When you switch your phone on, the following messages may appear

Insert SIM card

Check that the SIM card is correctly installed.

Phone locked: enter password

The Phone lock feature is enabled. You must enter the phone's password before you can use the phone.

Enter PIN

- You are using your phone for the first time. You must enter the Personal Identification Number supplied with the SIM card.
- The PIN check feature is enabled. Every time the phone is switched on, you must enter the PIN. To disable this feature, use the **PIN check** menu option. See page 165.

Enter PUK

The PIN was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your network operator.

“No service” displays

- The network connection has been lost. You may be in a weak reception area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialled

- Have you pressed the key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

Your correspondent cannot reach you

- Is your phone switched on (the key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have set an incoming call barring option.

Your correspondent cannot hear you speaking

- Have you switched off the microphone (**Mute** appears)?
- Are you holding the phone close enough to your mouth? The microphone is located at the bottom of the phone.

The phone starts beeping and “Battery Low” flashes on the display

The battery is insufficiently charged. Replace the battery and recharge it.

The audio quality of the call is poor

- Check the signal strength indicator on the display ( ); the number of bars indicates the signal strength from strong ( ) to weak ( ).
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you recall a Phonebook entry

- Check that the number has been stored correctly by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take a note of:

- the model and serial numbers of your phone
- your warranty details
- a clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Access codes

There are several access codes that are used by your phone and its SIM card. These codes help protect the phone against unauthorised use.

Some access codes can be changed using the **Security** menu option. See page 165 for further details.

Phone password

The Phone lock feature (see page 166) uses the phone password to protect your phone against unauthorised use.

The phone password supplied with the phone is preset to “00000000” at the factory. To change the password, use the **Change password** menu option. See page 166.

PIN

The PIN (Personal Identification Number) protects your SIM card against unauthorised use. It is usually supplied with the SIM card. When the PIN Check feature is enabled (see page 165), you must enter the PIN each time you switch on the phone.

If you key in an incorrect PIN three times in succession, you’ll have to key in the PUK and press the **OK** soft key to unlock the phone. Key in a new PIN and press the **OK** soft key. Key in the new PIN again and press the **OK** soft key.

PIN2

The PIN2, supplied with some SIM cards, is required to access some functions, such as charging unit counters. These functions are only available if supported by your SIM card.

If you key in an incorrect PIN2 three times in succession, you'll have to key in the PUK2 and press the **OK** soft key to unlock the phone. Key in a new PIN2 and press the **OK** soft key. Key in the new PIN2 again and press the **OK** soft key.

PUK

The PUK (PIN Unblocking Key) is required to change a blocked PIN. The PUK may be supplied with the SIM card. If not, contact your local service provider.

If you key in an incorrect PUK ten times in succession, the SIM card cannot be used anymore. Contact your service provider for a new card.

You cannot change the PUK. If you lose the code, contact your service provider.

PUK2

The PUK2, supplied with some SIM cards, is required to change a blocked PIN2.

If you key in an incorrect PUK2 ten times in succession, you cannot use the functions requiring the PIN2. Contact your service provider for a new card.

You cannot change the PUK2. If you lose the code, contact your service provider.

Call barring password

The 4-digit call barring password is required when you use the Call Barring function. You obtain the password from your service provider when you subscribe to this function.

You can change this password using the **Change barring password** menu option (**Menu 3.2.7**). For further details, see page 83.

Health and safety information

SAR certification information

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the EU Council is 2.0 W/kg.*

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary depending on national reporting requirements and the network band.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Precautions when using batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, make sure that you are following the special regulations of the given area or country.

Operating environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on
- should not carry the phone in a breast pocket
- should use the ear opposite the pacemaker to minimise potential interference

If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call, proceed as follows.

1. If the phone is not on, switch it on.

2. Key in the emergency number for your present location (for example, 999 or any other official emergency number). Emergency numbers vary by location.

3. Press the key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch off your phone before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove, or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features of your mobile phone, here are a few definitions.

ALS (Alternate Line Service)

Capability of associating two lines with one SIM card. With this service, you can make and receive calls on either line, as required.

Call barring

Ability to restrict outgoing and incoming calls.

Call diverting

Ability to reroute calls to another number.

Call holding

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

Call waiting

Ability to inform users that they have an incoming call when engaged on another call.

CLI (Caller Line Identification) services

Services allowing subscribers to view or block the telephone numbers of callers.

EMS (Enhanced Message Service)

Network service sending and receiving messages that include images, sounds, and/or animations to and from another user without having to speak to the correspondent.

GPRS (General Packet Radio Service)

New non-voice value-added service that allows information to be sent and received across a mobile telephone network. GPRS guaranties continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

MMS (Multimedia Message Service)

A message service for the mobile environment, standardized by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)--it provides automatic, immediate delivery of user-created content from phone to phone. The message addressing used is primarily phone numbers; thus the traffic goes from phone to phone. MMS also provides support for e-mail addressing, so that messages can also be sent by

e-mail. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and in the future also video clips and presentation information.

Multiparty calling

Ability to establish a conference call involving up to five additional parties.

PIN (Personal Identification Number)

Security code that protects the phone/SIM against unauthorised use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

PUK (PIN Unblocking Key)

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

Roaming

Use of your phone when you are outside your home area (when travelling for example).

SDN (Service Dialling Numbers)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

SIM (Subscriber Identification Module)

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot in the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service for sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited, or sent.

Soft keys

Two keys marked and on the phone, the purpose of which:

- varies according to the function that you are currently using
- is indicated on the bottom line of the display just above the corresponding key

Voice mail

Computerised answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice), and records a message.

GPRS telephone SGH-D488 Quick Reference Card

Access the Menu Functions	① Press the **Menu** soft key in idle mode. ② Scroll with the navigation keys through the main menus until you reach the required menu. ③ Press the **Select** soft key. ④ Scroll with the Up or Down key through the list of options until the required option is selected. ⑤ Press the **Select** soft key to confirm.

Each of the two soft keys (and) performs the function indicated by the text above them, on the bottom line of the display.

Switch On/ Off	Press and hold the key.
Make a Call	① Enter the number. ② Press the key.
Adjust the Volume	Press the volume keys on the left side of the phone.
Answer a Call	Open the phone or Press the key.
End a Call	Briefly press the key.

View Missed Calls Immediately After Missing Them	① Open the phone and press the **View** soft key. ② Scroll with the Up and Down keys through the missed calls. ③ To make a call, press the ☎ key.
Redial the Last Number	Press the ☎ key twice.
Speed-Dial	In idle mode, hold down the appropriate key (**2** to **9**). Or, press the key (**2** to **9**) and the ☎ key.
Dial a Number in Your SIM Card	Enter the SIM location, press the # key, and press the ☎ key.
Listen to Your Voice Mail	Press and hold the **1** key.

Store Numbers in Phonebook	① Enter the number. ② Press the **Save** soft key. ③ Select the memory type and press the **Select** soft key. ④ If you select **Phone**, select the number type and press the **Select** soft key. ⑤ Enter the name and press the **OK** soft key. ⑥ If you select **SIM**, enter the location number and press the **OK** soft key.
Search for a Number in Phonebook	① Press the **Phonebook** soft key in idle mode. ② Select **Find name**. ③ Enter a name. ④ Press the **OK** soft key. ⑤ Press the Left or Right key, if necessary. ⑥ Press the ☎ key to dial.